



Instruction Book

ECM3505
Coffee Maker



GB INSTRUCTION BOOK

KO 설명서

ZH 說明手冊

ZH 说明书

VI SÁCH HƯỚNG DẪN

TH សៀវភៅ

JA 使用説明書

IN BUKU PANDUAN

CONTENTS

ENGLISH	5
한국어	X
中文(繁體)	X
中文(简体)	X
TIẾNG VIỆT	X
ภาษาไทย	X
日本語	X
BAHASA INDONESIA	X

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

Visit our website to:



Get usage advice, brochures, trouble shooter, service information: **www.electrolux.com**



Register your product for better service: **www.electrolux.com/productregistration**



Buy Accessories and Consumables for your appliance: **www.electrolux.com/shop**

CUSTOMER CARE AND SERVICE

When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.



Warning / Caution-Safety information



General information and tips



Environmental information

Subject to change without notice.





COMPONENTS

- A. ON/OFF switch with power indicator light
- B. Water tank
- C. Water level indicator
- D. Hinged lid
- E. Filter holder with anti-drip valve
- F. Coffee jug with graduation on both sides
- G. Warming plate
- H. Power cord & plug

SAFETY ADVICE

Read the following instruction carefully before using the appliance for the first time.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance may only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate!
- Never use or pick up the appliance if
 - the supply cord is damaged,
 - the housing is damaged.
- The appliance must only be connected to an earthed socket. If necessary an extension cable suitable for 10 A can be used.
- If the appliance or the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person, in order to avoid hazard.
- Always place the appliance on a flat, level surface.
- Never leave the appliance unattended while connected to the supply mains.
- The appliance must be switched off and the mains plug withdrawn each time after use, before cleaning and maintenance.
- The appliance and accessories become hot during operation. Use only designated handles and knobs. Allow to cool down before cleaning or storage.
- Do not immerse the appliance in water or any other liquid.
- Do not use or place the appliance on a hot surface or near source of heat.
- Warning: Avoid spillage on the connector.
- Attention: The heating element surface is subject to residual heat after use.
- The mains cable must not come into contact with any hot parts of the appliance.
- This appliance is intended for domestic use only. The manufacturer cannot accept any liability for possible damage caused by improper or incorrect use.
- Never operate appliance with open lid.
- Do not remove the filter holder during the brewing process as the appliance is pressurized. The risk of burns exists.
- Fill the water tank only with cold water, never with milk or other liquids.

- Do not use the appliance if the water tank has not been filled.
- Do not use the appliance without the drip tray or the drip grating.

This appliances is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and others working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.


GETTING STARTED


1. Place the machine on a flat surface. **When starting the machine for the first time**, fill the tank with cold water. Start the machine with the ON/OFF switch. Let a full tank of water pass through the machine once or twice to clean it, without using paper filter or coffee.
2. **Making coffee:** open the lid and fill the water tank with fresh cold water up to the desired level. There is a gauge for cups on the water tank and on the coffee jug. **(The machine must not be used with empty tank!)**
3. **Insert a size 1x4 paper filter in the filter holder** and fill it with ground coffee. There is a gauge for recommended number of spoons of coffee next to the water gauge. For average strong coffee one measuring spoon (approx. 6-7 g) per cup is sufficient. Close the water tank lid and place the jug (complete with lid) onto the warming plate.
4. **Start the machine** with the ON/OFF switch. The power indicator light will come on and hot water will flow into the filter. When water has stopped flowing, the warming plate keeps the coffee hot until the machine is turned off with the ON/OFF switch. If the machine is not turned off manually, the Safety Auto-Off function turns it off after 40 minutes.
5. **If the jug is removed**, the filter valve prevents coffee from dripping onto the warming plate. **(While boiling, the jug must not be removed for longer than 30 seconds or the filter will overflow.)**

CLEANING AND CARE

6. **Turn the machine off and unplug the power cord.** Wipe all outer surfaces with a damp cloth. Coffee jug and jug lid are dishwasher proof. **Never use caustic or abrasive cleaners, and never immerse the machine in liquid!**
7. **To clean the filter holder**, lift up the handle and remove the filter holder. To clean the filter valve thoroughly, rotate it several times while it is being rinsed.
8. **Decalcifying** is recommended regularly, depending on water hardness. Fill the tank with water and decalcifier according to product instructions, then follow steps 9 and 10.
9. **Place the coffee jug with its lid** onto the warming plate. Allow the decalcifier to take effect for about 15 minutes, then switch the machine on. Switch it off when the solution has finished flowing through. If necessary repeat the decalcifying process.
10. **Allow the machine to run at least twice with plain water.** Then thoroughly rinse the coffee jug, lid and filter holder under running water, activate the filter valve repeatedly during the rinse process.

DISPOSAL

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

GB

KO

ZH

ZH

VI

TH

JA

IN



3481-E-ECM3505-02-01-0315

Share more of our thinking at www.electrolux.com

electrolux.com/shop



Electrolux Floor Care AB
S:t Göransgatan 143
S-105 45 Stockholm
Sweden