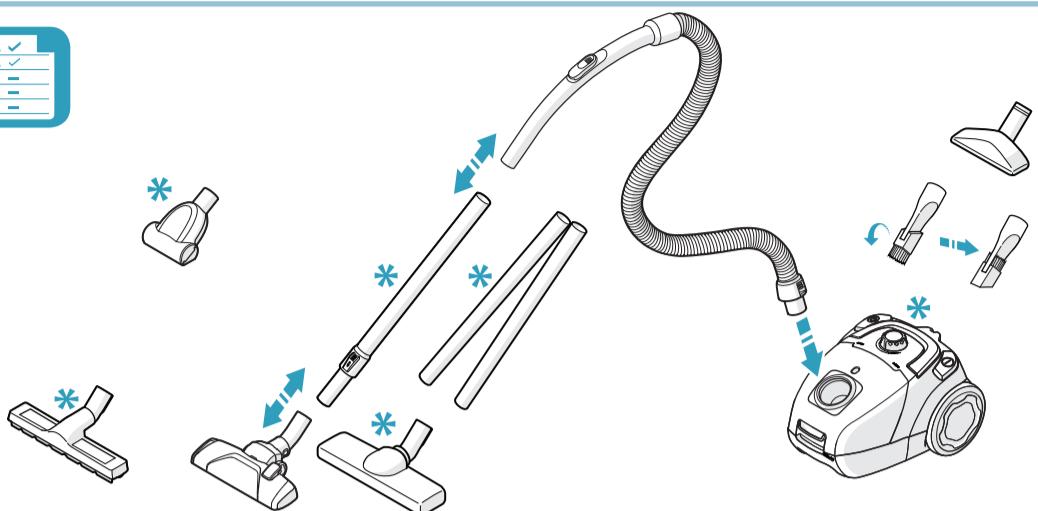
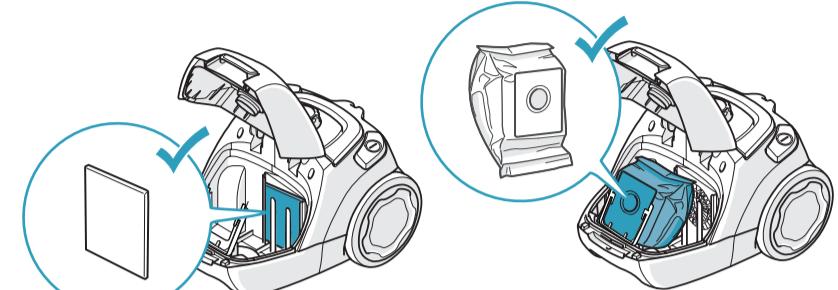




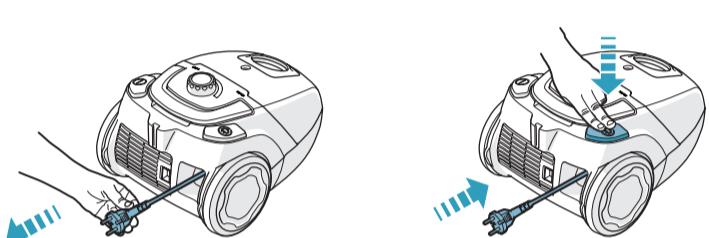
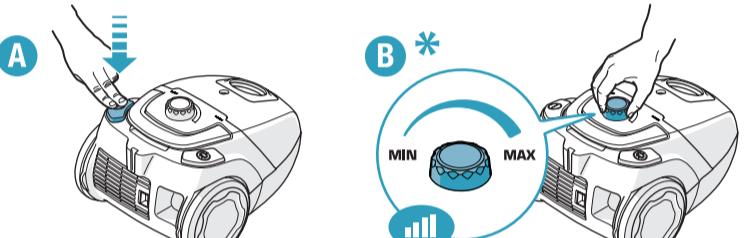
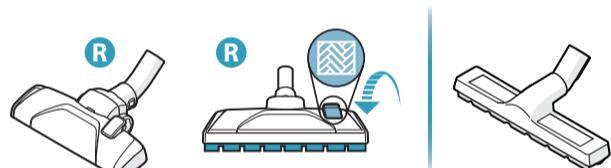
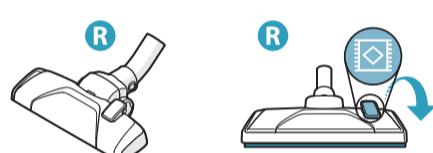
Electrolux

COMPACT GO

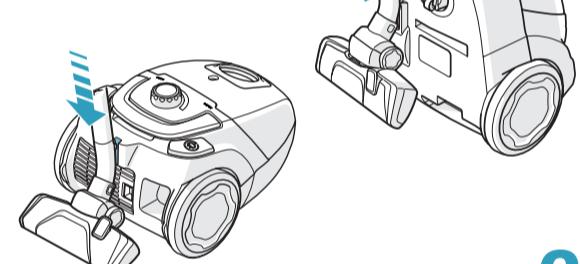
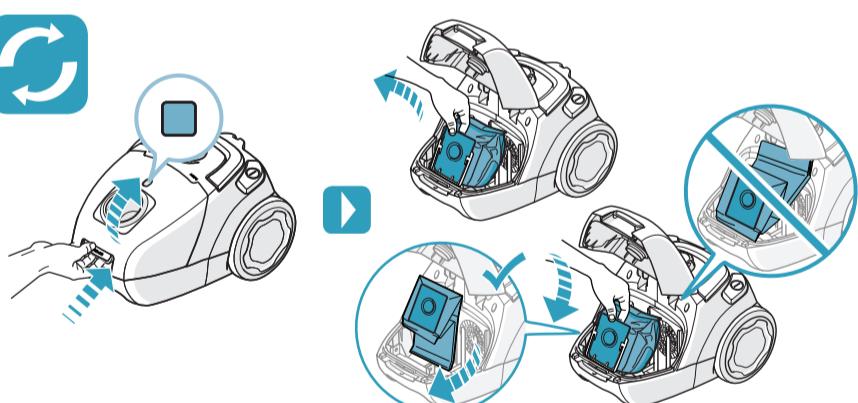
- 1. ✓
- 2. ✓
- 3. —
- 4. —
- 5. —

**1****2**

* Applies to certain models only | 僅適用於特定型號 | 仅适用于特定型号 | Berkenna dengan model yang tertentu sahaja | Chỉ áp dụng cho một số kiểu máy | ใช้กับเครื่องใช้ไฟฟ้าบางรุ่นเท่านั้น | 특정 모델에만 적용 | يصلاح لطرازات محددة فقط

**3****4****5****R**

Recommended nozzle | 推薦噴頭 | 推荐喷嘴 | Nasel yang disarankan | đầu hút được khuyến nghị | หัวดูดที่แนะนำ | 권장 노즐 | المروحة المناسبة

**6**

5x = 1x

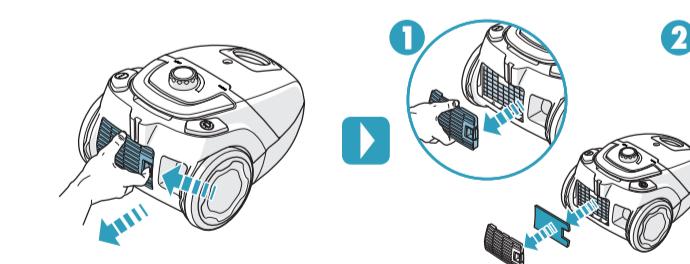
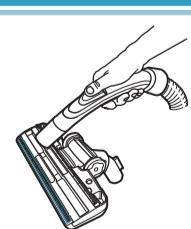
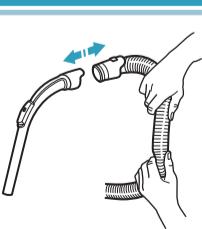
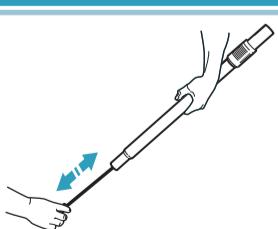


EF151

30°C

24h

click

**7****8**

