



Instruction Book
Mode d'emploi
PURE F9





TW - electrolux.com.tw
 KO - electrolux.co.kr
 JA - electrolux.co.jp
 CN - electrolux.com.cn
 ID - electrolux.co.id
 TH - www.electrolux.co.th
 SG - electrolux.com.sg
 MY - electrolux.com.my
 HK - www.electrolux.com.hk



Availability of Electrolux Webshop and Consumables & Accessories varies by region and country. Please refer to your local Electrolux website for more details or contact local customer service for support.

CONSUMABLES & ACCESSORIES

PUREF9 Performance Kit
 Ref: ESPK9
 Part nr: 9001690784



3in1 Nozzle
 Ref: ZE127
 Part nr: 900922924/7



Home & Car kit
 Ref: KIT18
 Part nr: 900922934/6



Citrus Burst
 Ref: ESMA
 Part nr: 9001677807

Evening Rose
 Ref: ESRO
 Part nr: 900167765



 
S-fresh 18 Value pack
 Ref: ESVP1
 Part nr: 9001681221

 
 
 
 
 


Brush roll hard floor
 Ref: ESBH9
 Part nr: 9009229460



Brush roll all-floors & carpet
 Ref: ESBA9
 Part nr: 9009229478

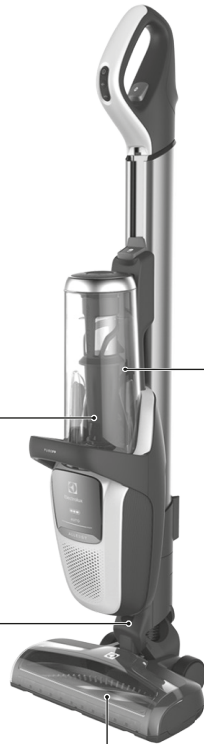

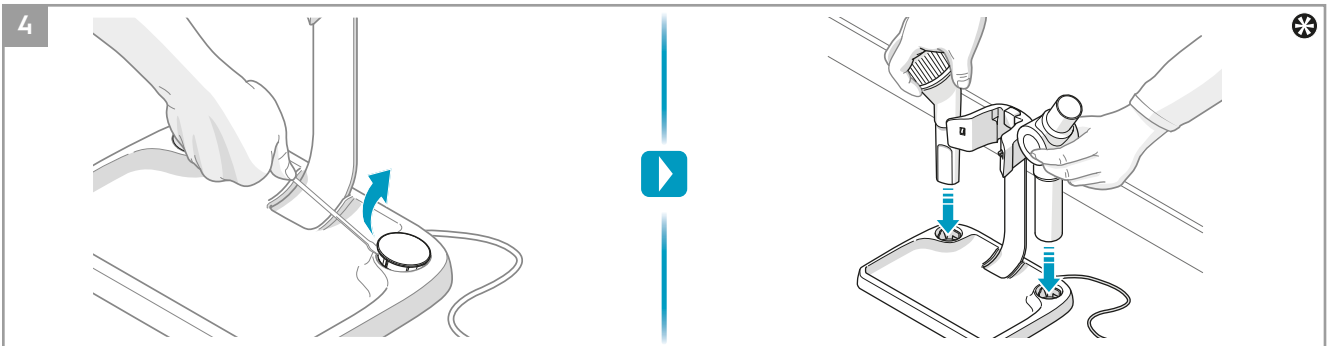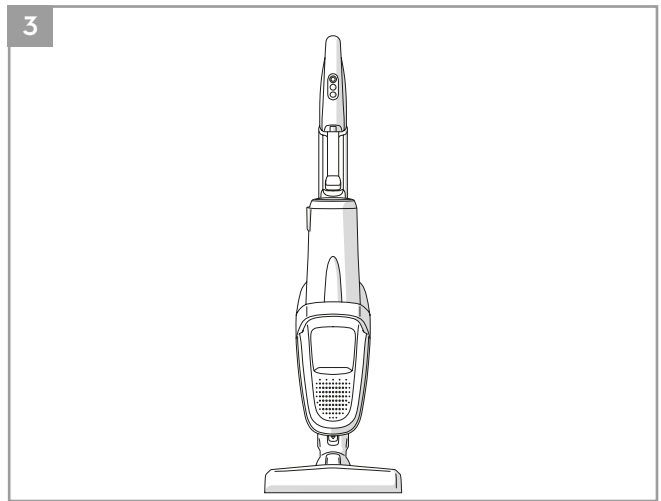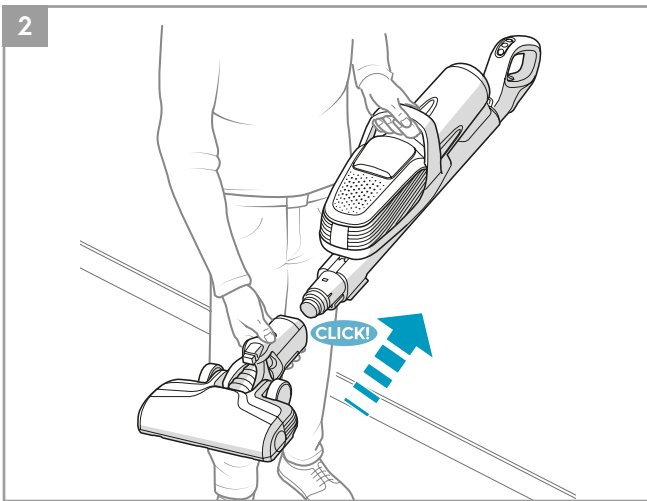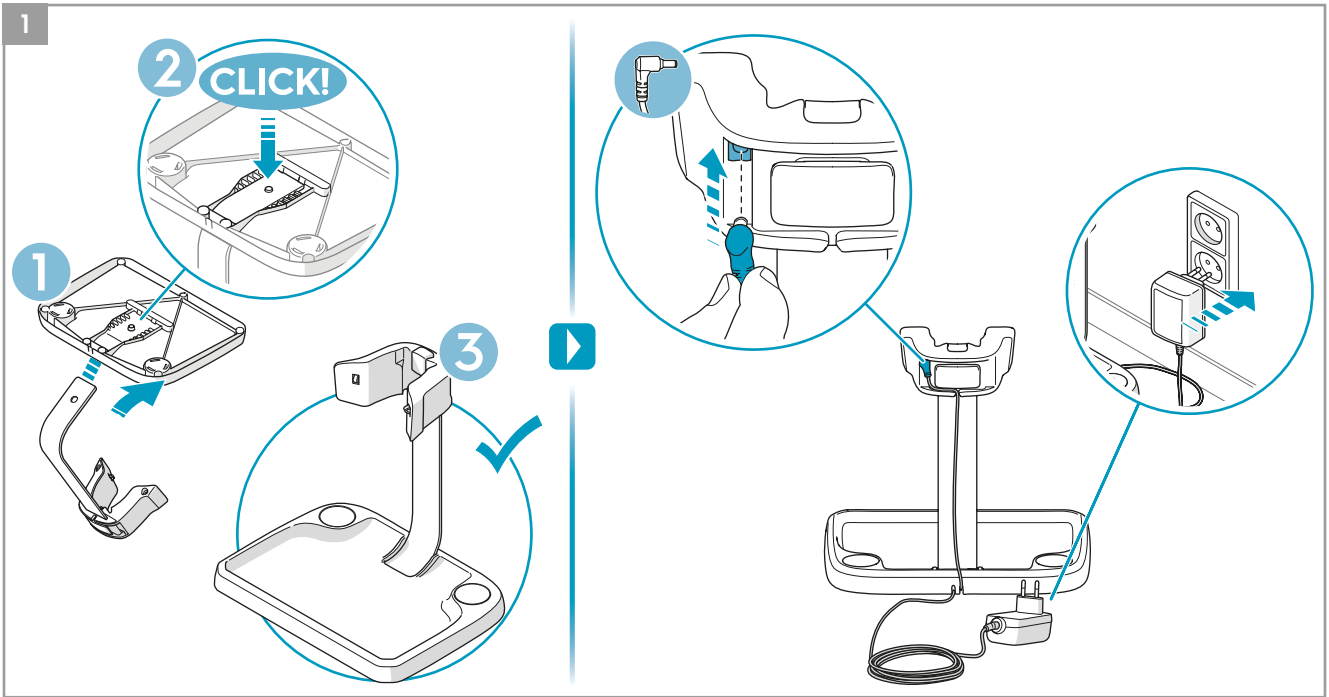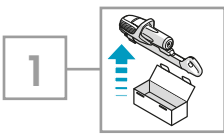





2



1

CHARGING

    충전방법
 充電方法
 การชาร์จแบตเตอรี่
 產品充電指南
 充电指南

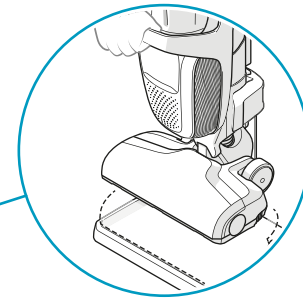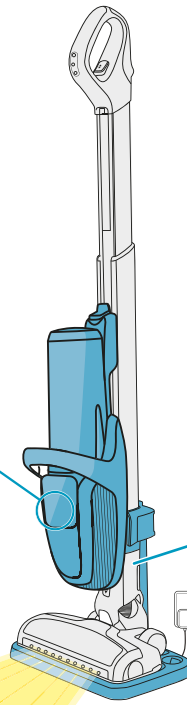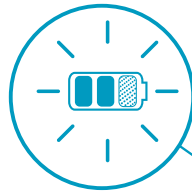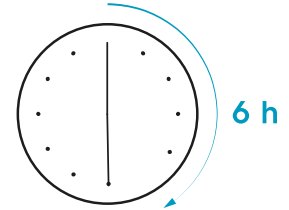


BLINKS X 2

LED 등 2번 깜빡임
 正しくセットされると2回点滅
 LED กระพริบ 2 ครั้ง
 LED燈閃爍兩次
 闪烁2次

BLINKS x 2




 2

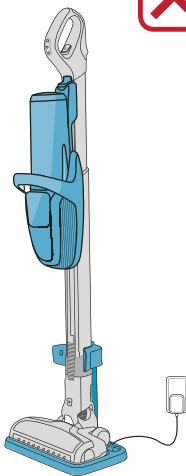

NOT CHARGING

 
충전 되지 않음
 本体が上部にあると充電されません
 ไม่ได้กำลังชาร์จอยู่
 未正確充電
 未进行充电

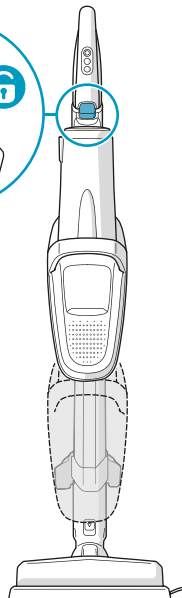

PUSH DOWN
 본체를 아래로 내림
 本体を下まで下げる
 กดเลื่อนลง
 向下推至底部
 主机推到底部






 CLICK
 คลิ๊กลงล็อก
 卡緊聲
 卡住


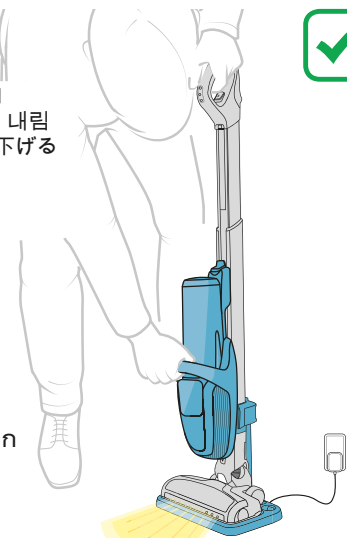












BLINKS x 2



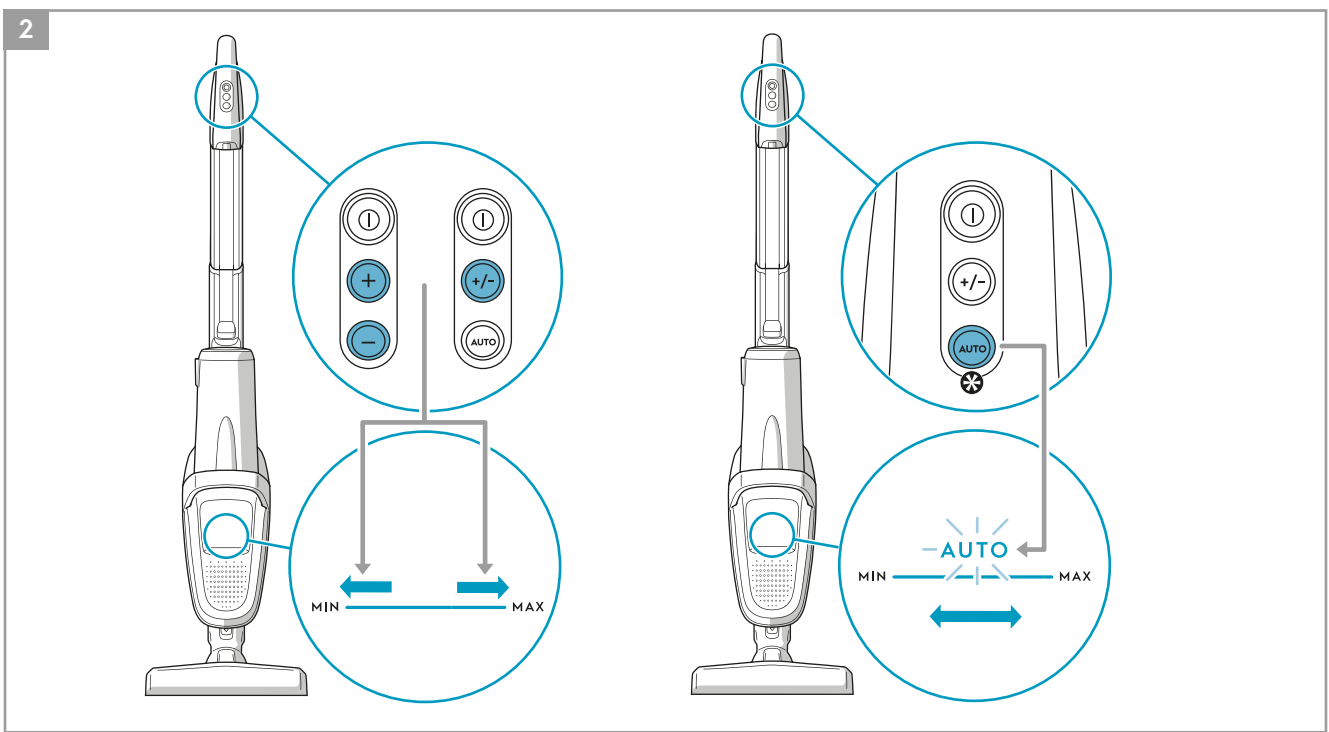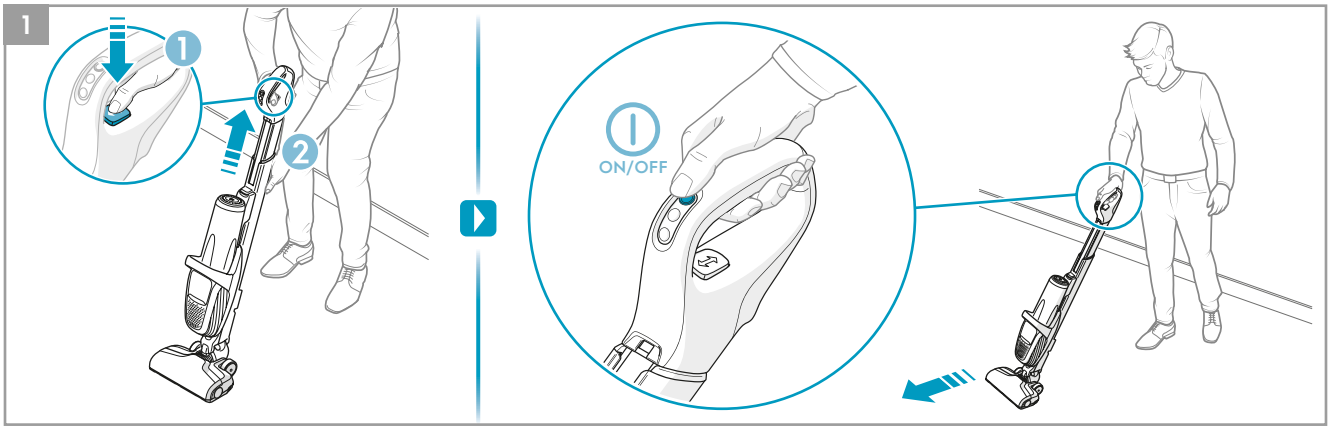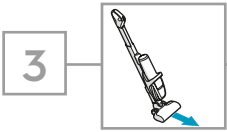   

4

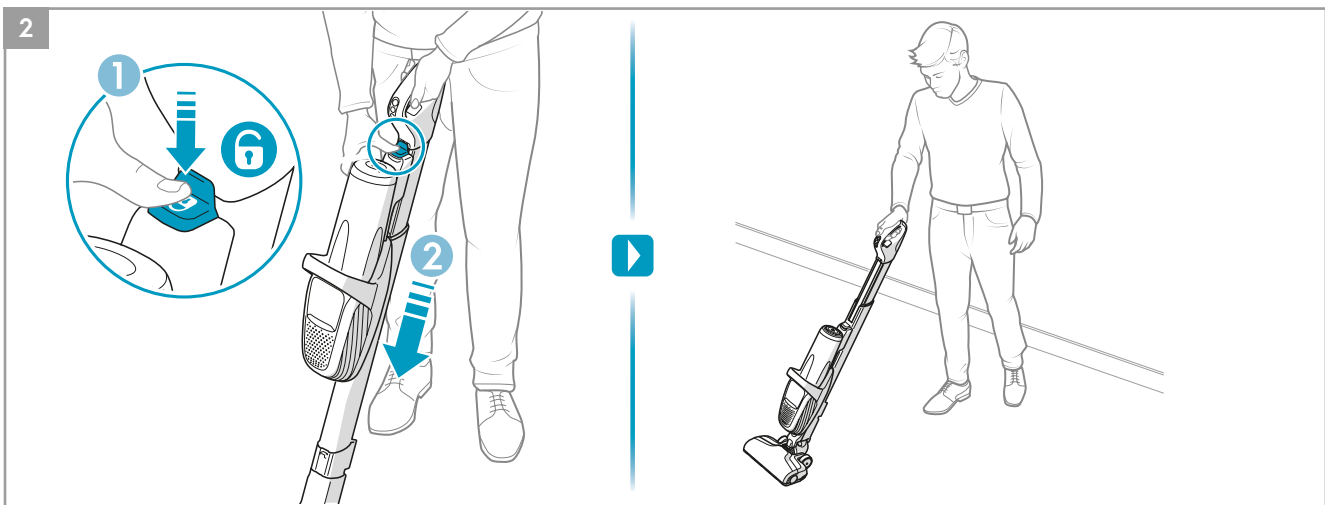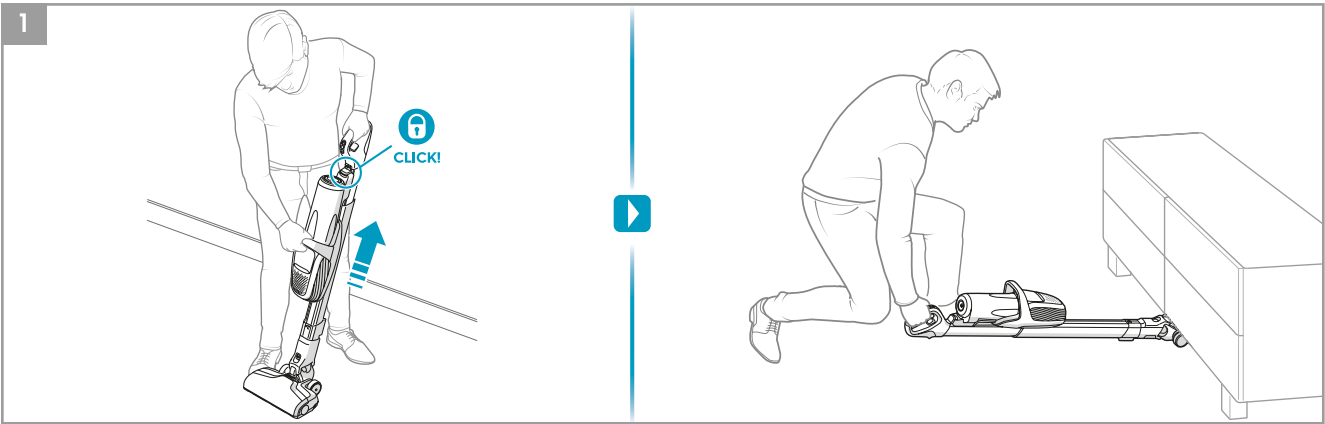  

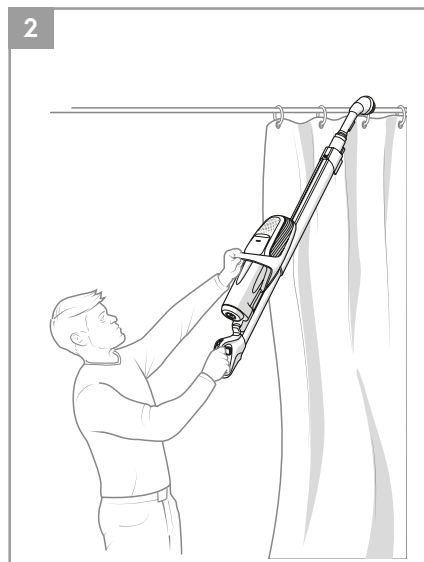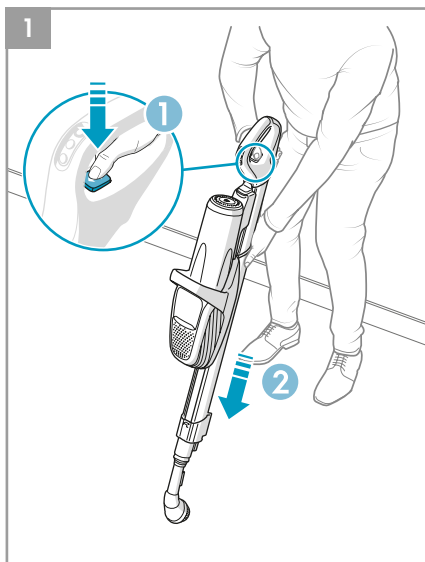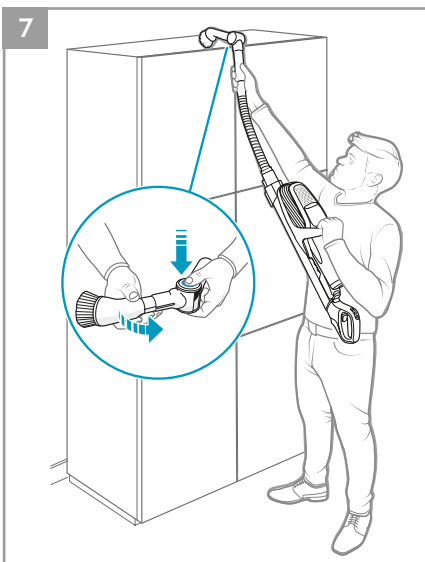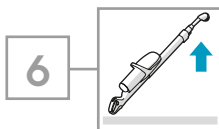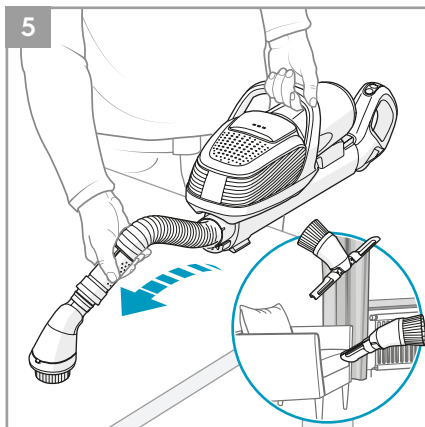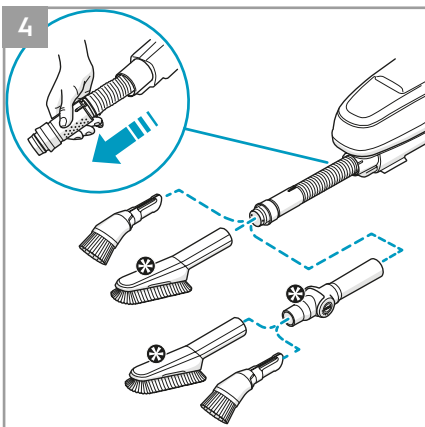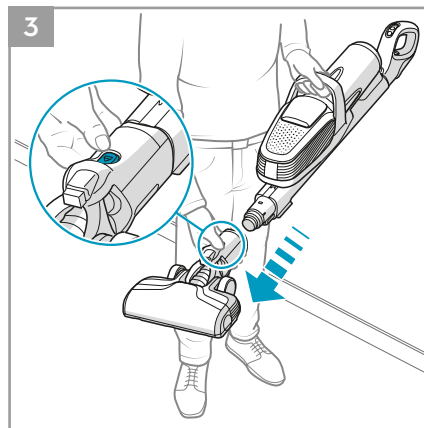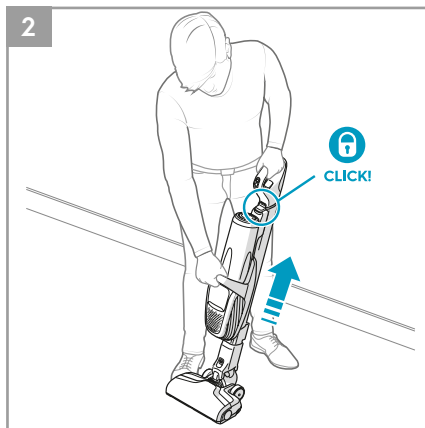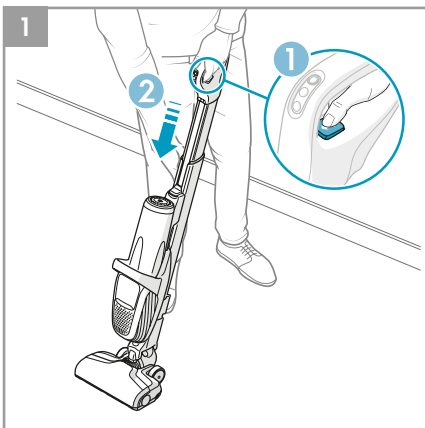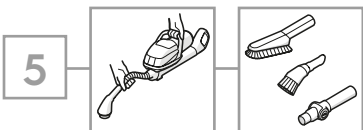          

* Certain models only

