


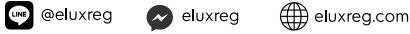

ETB2502H-A, ETB2502H-H, ETB2302H-A,
ETB2302H-H, ETB2802H-A, ETB2802H-H,
ETB3400H-A, ETB3400H-H, ETB3700H-A,
ETB3700H-H, EBB2802H-A, EBB2802H-H,
EBB3400H-A, EBB3400H-H, EBB3700H-A,
EBB3700H-H, EME2800H-A, EME2800H-H,
EME3700H-A, EME3700H-H

EASY WAY TO REGISTER YOUR PRODUCT WITH YOUR SMARTPHONE

- 1** **Photograph** the camera icon located on your product's serial tag, including the 4 dots (◎).

- 2** **Send it in** via Line, Facebook Messenger or go online.

- 3** **Enjoy** many privileges.*

* Terms and conditions apply.



Electrolux

ID-ENG

Depdag no. : I.13.EI12.07723.1218



Terima Kasih telah memilih Electrolux!

Selamat dan terima kasih telah memilih Electrolux lemari es/freezer. Kami yakin Anda akan mudah menggunakan lemari es baru ini. Sebelum mulai menggunakan lemari es, kami sarankan agar Anda membaca seluruh buku petunjuk pengguna yang mendeskripsikan lemari es beserta fungsinya. Untuk menghindari risiko, salah menggunakan, atau bahaya yang timbul saat menggunakan peralatan listrik baru, penting agar Anda membaca petunjuk keselamatan dengan teliti. Kami sarankan agar Anda menyimpan buku petunjuk pengguna ini untuk dibaca lagi di kemudian hari dan memberikannya ke pemilik lain di kemudian hari. Setelah membuka kemasan lemari es, mohon periksa bahwa lemari es tidak rusak. Jika ragu, jangan gunakan lemari es ini, tetapi hubungi Pusat Layanan Pelanggan Electrolux setempat.

DAFTAR ISI

Informasi Penting Terkait Keselamatan	3
Memasang dan Membersihkan Lemari Es	4
Pengatur Suhu.....	5
Lampu LED.....	7
Wadah Penyimpanan di Pintu	7
Laci Sayur (Crisper Bin).....	7
- Menyimpan Sayuran	
- Menyimpan Buah-Buahan dan Bahan Makanan Kecil	
Menghilangkan Bau.....	8
Fitur-Fitur Lemari Es	9
Panduan Penyimpanan Makanan.....	16
Penyelesaian masalah.....	17
Suara	18

**RoHS
Compliant**

Being ensured the permissible content limitation of
some toxic chemicals (RoHS compliant)
(According to the Circular No. 30/2011/TT-BCT, Vietnam,
dated 10th August, 2011)

KIAT LINGKUNGAN

Informasi Pembuangan untuk Pengguna

Sebagian besar bahan kemasan dapat didaur ulang.

Buang bahan ini melalui depot pendaurulangan di tempat Anda atau tempatkan pada wadah pembuangan yang sesuai.

Jika ingin membuang lemari es ini, silakan hubungi pihak yang berwenang di tempat Anda dan tanyakan cara pembuangan yang benar.

Ketentuan penggunaan

Lemari es ini dimaksudkan untuk digunakan dalam rumah tangga dan penggunaan serupa seperti,

- Area pantri di toko, kantor, atau lingkungan kerja lainnya;
- Rumah petani dan konsumen di hotel, motel, dan jenis lingkungan tempat tinggal lainnya;
- Akomodasi penginapan lainnya;
- Katering dan penggunaan non-eceran sejenis;

Baca buku petunjuk pengguna dengan teliti dan simpan di tempat yang mudah dijangkau untuk dibaca lagi nanti.

Simbol-simbol yang Anda lihat dalam buku petunjuk ini memiliki arti berikut:

PERINGATAN

Simbol ini menunjukkan informasi terkait keselamatan diri Anda.

PERHATIAN

Simbol ini menunjukkan informasi tentang cara menghindari kerusakan lemari es.

KIAT DAN INFORMASI

Simbol ini menunjukkan kiat dan informasi tentang penggunaan lemari es.

KIAT LINGKUNGAN

Simbol ini menunjukkan kiat dan informasi tentang penggunaan lemari es secara ekonomis dan ekologis.

ARTI SIMBOL-SIMBOL

 Simbol ini menunjukkan jangan lakukan.

 Simbol ini menunjukkan selalu lakukan.

KIAT DAN INFORMASI

Penting: Periksa apakah ada kerusakan atau tanda. Jika Anda mendapatkan lemari es rusak atau ditandai, Anda harus melaporkannya dalam waktu 7 hari jika ingin mengklaim adanya kerusakan/tanda berdasarkan garansi dari produsen. Hal ini tidak memengaruhi hak Anda berdasarkan undang-undang.

PERINGATAN

 Jika terdapat tulisan 'Mudah terbakar' dan/atau simbol api kecil, jangan simpan wadah tersebut di dalam lemari es. Jika Anda melakukannya, hal ini dapat menyebabkan terjadinya ledakan.

Saat membuat lemari es dan freezer, lepaskan semua pintunya. Anak-anak dapat kehabisan napas jika mereka terjebak di dalamnya. Lemari es ini berisi isolasi yang dibentuk dengan gas tiup yang mudah terbakar. Hindari bahaya keselamatan dengan berhati-hati saat membuat lemari es ini.

PERINGATAN

 Lemari es ini harus dicolokkan ke stopkontak listrik khusus 220-240V, 50/60Hz AC.

 Pastikan stopkontak listrik dipasang ke tanah dengan benar. Konsultasikan dengan teknisi listrik yang memenuhi syarat jika Anda tidak yakin.

 Jangan menggunakan kabel sambungan atau colongan adaptor.

 Jika kabel daya rusak, maka harus diganti oleh produsen, agen servisnya, atau pihak lain yang serupa dan memenuhi syarat untuk menghindari bahaya.

 Cabut kabel lemari es sebelum membersihkan dan sebelum mengganti bola lampu untuk menghindari sengatan listrik.

 Jangan cabut kabel lemari es dengan menarik kabel daya. Selalu genggam colongan dengan kuat, dan tarik lurus dari stopkontak untuk menghindari kerusakan kabel daya.

 Pilih lokasi pemasangan yang tidak terlalu dingin. Suhu harus di atas 10 derajat C.

 Tempatkan lemari es di tempat yang kering untuk menghindari area dengan kelembaban yang tinggi.

 Jangan letakkan lemari es di area yang sangat dingin atau tidak terlindungi, misalnya di garasi atau beranda.

 Jangan letakkan lemari es di bawah sinar matahari langsung.

 Jangan letakkan lemari es di dekat kompor, api, atau pemanas.

 Steker harus dapat diakses bila alat ini sudah siap digunakan.

PERINGATAN

Lemari es ini tidak dimaksudkan untuk digunakan oleh orang-orang (termasuk anak-anak) yang kekurangan kemampuan fisik, sensor, atau mental, atau yang kurang pengalaman dan pengetahuan, kecuali jika mereka diawasi atau diberikan petunjuk terkait penggunaan lemari es ini oleh seseorang yang bertanggung jawab atas keselamatan mereka. Anak-anak harus diawasi untuk memastikan mereka tidak bermain-main dengan lemari es ini.

Ikti langkah-langkah berikut:

 Jangan izinkan anak-anak bermain-main dengan lemari es.

 Jangan menyimpan minuman bersoda dalam kompartemen freezer.

 Jangan coba perbaiki sendiri lemari es.

 Jangan gunakan pemanas atau pengering listrik untuk mencairkan es dalam freezer karena dapat membuat Anda tersengat listrik.

 Jangan gunakan peralatan listrik di dalam area penyimpanan.

PERINGATAN

Kaki Keseimbangan

Ketika lemari es terpasang, putar kaki keseimbangan pada lantai untuk memantapkannya. Angkat bagian depan lemari es untuk meletakkan kaki kementapan, lalu putar 1/4 putaran lagi untuk memastikan kaki bersentuhan dengan lantai. Jika Anda memindahkan lemari es, jangan lupa untuk memutarinya kembali agar lemari es dapat berpindah. Jangan lupa untuk menyetelnya kembali saat memasang kembali.



Tampilan Samping

PERINGATAN TERKAIT REFRIGERAN R600A

- Lemari es ini mengandung refrigeran R600a yang mudah terbakar. Hindari bahan keselamatan dengan berhati-hati saat memasang, menggunakan, menyervis, dan membuang lemari es ini. Jika lemari es Anda mengandung R600a, kandungan ini ditunjukkan di pelat nilai di dalam lemari es.
- Pastikan sistem pipa sirkuit refrigeran tidak rusak saat diangkat dan dipasang.
- Apabila terjadi kerusakan yang tak disengaja, jauhkan lemari es dari api dan perangkat apa pun yang menghasilkan bunga api atau bunga api listrik dan penghasil cahaya selama operasi normal atau abnormal, dan cabut kabel lemari es dari titik daya. Hubungi pusat servis yang berwenang untuk melakukan tindakan dan mendapat saran yang diperlukan.
- Refrigeran yang bocor dapat menimbulkan bunga api pada lubang angin jika terjadi kebocoran.
- Ruang untuk memasang lemari es ini setidaknya harus berukuran 1m³ per 8g dari refrigeran. Jumlah dan jenis refrigeran dalam lemari es dapat dilihat di pelat nilai di dalam lemari es.
- Jangan rusak sirkuit refrigeran.
- Jangan gunakan peralatan listrik di dalam kompartemen penyimpanan makanan lemari es ini, kecuali jika jenis peralatan tersebut disarankan oleh produsen.
- Jaga agar lubang ventilasi tetap terbuka , dalam kerangka alat atau dalam struktur internalnya, bebas dari sumbatan
- Jangan menggunakan perangkat mekanis atau media lain untuk mempercepat proses pencairan, selain yang direkomendasikan oleh produsen.



PERINGATAN

- Jangan gunakan pembersih uap. Jika komponen aktif bersentuhan dengan uap kondensasi, maka dapat terjadi hubungan pendek atau menyebabkan terjadinya sengatan listrik.
- Jangan mencolokkan lemari es ke colokan yang sudah diatur waktunya ke titik daya.
- Jangan meletakkan peralatan Anda pada permukaan yang tidak rata.
- Jangan simpan bahan yang mudah meledek seperti kaleng aerosol dengan zat pendorong yang mudah terbakar di dalam lemari es.
- Jangan menyimpan minuman bersoda dalam kompartemen freezer.
- Jangan coba perbaiki sendiri lemari es. Hanya gunakan petugas servis yang memenuhi syarat atau berwenang untuk perbaikan.
- Jangan gunakan pemanas atau pengering listrik untuk mencairkan es dalam freezer karena dapat membuat Anda tersengat listrik.

Memasang Lemari Es Baru Anda


Bersihkan lemari es secara menyeluruh dengan mengikuti petunjuk dan seka debu yang tertimbun saat pengiriman.

Periksa apakah lantai sama tinggi. Jika tidak sama rata, sesuaikan kaki perata agar lemari es sama rata dan stabil.

Sebaiknya Anda membawakan lemari es Anda menyalakan selama dua hingga tiga jam sebelum memasukkan makanan ke dalamnya. Hal ini akan memungkinkan Anda memeriksa apakah lemari es berfungsi dengan baik dan apakah udara yang cukup dingin masuk ke freezer.

Jarak di sekitar freezer di bawah dan di atas (Top dan Bottom Mount) Lemari es

- Beri minimum 30mm jarak ruang di kedua sisi lemari es.
- Beri 50mm jarak ruang di bagian belakang lemari es.
- Beri minimum 10mm jarak ruang di atas engsel pintu.
- Jika Anda tidak memiliki lemari yang memberikan kelongsongan aliran udara di atas lemari es, jarak ruang yang disarankan di bagian atas lemari es adalah 90mm.
- Saat diposisikan di pojokan, ruang berukuran setidaknya 350mm di sisi engsel membuat pintu dapat cukup dibuka agar wadah dan rak dapat dilepas.

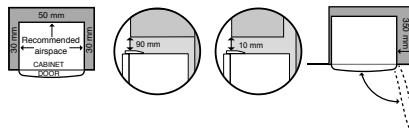

Catatan: Pintu untuk semua model didesain tidak sama rata dengan lemari (tidak sejajar). Lemari es harus diletakkan membelakangi dinding dan jarak antara bagian belakang lemari es dan dinding tidak boleh lebih dari 75mm.

Lemari es Anda menggunakan komponen hemat energi yang menghasilkan suara yang berbeda (Lihat contohnya di halaman "Suara") dengan lemari es lama Anda. Terkadang, terdengar suara gemicik refrigeran yang mengalir atau suara bagian-bagian yang memuai dan mengerut. Suara-suara ini sangat normal.

Membersihkan Lemari Es Anda

Eksterior

Anda hanya boleh membersihkan lemari es Anda dengan air sabun hangat-hangat kuku dan kain lembut. Bilas dengan air bersih lalu seka permukaannya dengan kain bersih yang lembut untuk menghilangkan sisa sabun.

Interior

Anda harus membersihkan interior lemari es secara rutin. Bersihkan interior dengan kain lembut dan air sabun hangat-hangat kuku. Keringkan semua permukaan dan bagian-bagian yang dapat dilepas secara menyeluruh. Hindari jangan sampai pengatur lemari es terkena air. Jika Anda mengeluarkan komponen yang dapat dilepas, pasang kembali komponen tersebut dan nyalakan sebelum memasukkan kembali makanan ke dalam lemari es. Tentunya Anda harus menjaga kebersihan interior lemari es Anda dengan segera menyeka seluruh tumpahan makanan.

PERINGATAN

Jangan gunakan air panas, pelarut, pembersih dapur komersial, pembersih aerosol, bahan poles logam, pembersih tajam atau kasar, atau ampelas untuk membersihkan lemari es ini karena akan merusaknya. Ada banyak produk pembersih yang tersedia secara komersial dan deterjen yang mengandung pelarut yang merusak lemari es Anda. Saat membersihkan, hanya gunakan kain lembut dan air sabun hangat-hangat kuku.

PENGATUR SUHU

Saat pertama kali Anda menghidupkan lemari es, atur pengatur suhu lemari es dan freezer pada suhu normal. Lihat bagian di bawah untuk informasi tentang menyesuaikan suhu lemari es dan freezer.


① KIAT DAN INFORMASI

Mengubah pengaturan

Saat mengubah pengaturan suhu, lakukan sedikit penyesuaian dan tunggu 24 jam sebelum menilai apakah Anda perlu melakukan perubahan selanjutnya.

Untuk model Freezer Atas


Saran pengaturan suhu freezer

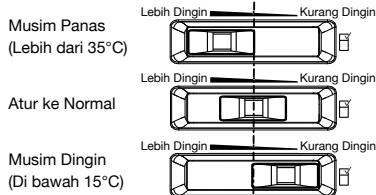

Penyesuaian suhu lemari es


1. Pilih pengatur lemari es
2. Geser pengatur ke kiri untuk mengatur ke lebih dingin
3. Geser pengatur ke kanan untuk mengatur ke kurang dingin

Saran pengaturan suhu lemari es

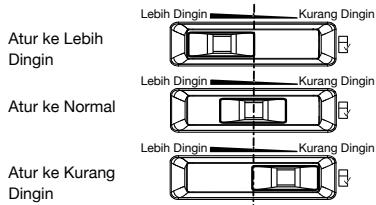

Untuk model Freezer Bawah


Saran pengaturan suhu freezer

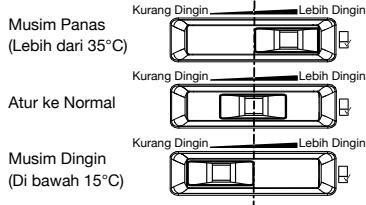

Penyesuaian suhu lemari es

1. Pilih pengatur lemari es
2. Geser pengatur ke kiri untuk mengatur ke lebih dingin
3. Geser pengatur ke kanan untuk mengatur ke kurang dingin

Saran pengaturan suhu lemari es

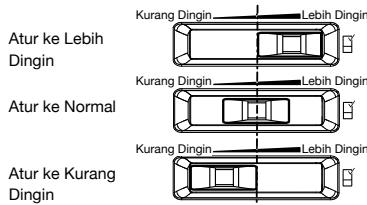

① KIAT DAN INFORMASI

Mengatur suhu freezer ke lebih dingin tidak disarankan untuk kondisi iklim normal atau sangat panas karena hal ini akan membatasi kapasitas pendinginan ke bagian lemari es lainnya. Pada iklim yang sangat dingin, freezer harus diatur ke lebih dingin.

ALARM PINTU

Jika pintu lemari es dibiarakan terbuka lebih dari dua menit, akan terdengar bunyi alarm. Atur ulang alarm dengan menekan tombol Light atau tutup pintunya.

PENGATUR SUHU


Untuk model Freezer Multi Atas

Saat Anda menyalaikan lemari es Anda untuk pertama kalinya, sebaiknya atur suhu lemari es hingga 3°C dan freezer hingga -18°C. Jika ingin mengubah suhu, gunakan petunjuk di bawah ini. Anda hanya boleh melakukan sedikit penyesuaian dan tunggu 24 jam untuk melihat apakah Anda perlu melakukan perubahan selanjutnya.


① KIAT DAN INFORMASI

Saat Anda mengatur suhu, Anda mengatur suhu suhu rata-rata untuk seluruh lemari es. Suhu di dalam setiap kompartemen dapat berbeda-beda, tergantung banyaknya makanan yang Anda simpan dan di mana Anda menaruhnya. Tinggi rendahnya suhu kamar juga dapat memengaruhi suhu yang sebenarnya di dalam lemari es.

Cara memilih kompartemen untuk mengatur suhu

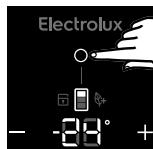

Gunakan tombol "Pilih Kompartemen" untuk menyoroti pengaturan suhu kompartemen freezer, tengah atau makanan segar.

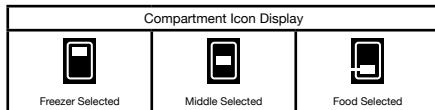

Menyesuaikan suhu freezer



1. Tekan tombol panah "<" kiri untuk membuat freezer lebih dingin 1°C.
2. Tekan tombol panah ">" kanan untuk membuat freezer lebih hangat 1°C.

Kisaran suhu Tengah: -23°C hingga -14°C

Menyesuaikan suhu kompartemen tengah



1. Tekan tombol panah "<" kiri untuk membuat freezer lebih dingin 1°C.
2. Tekan tombol panah ">" kanan untuk membuat freezer lebih hangat 1°C.

Kisaran suhu Lemari Es: -12°C hingga 3°C

Menyesuaikan suhu lemari es




1. Tekan tombol panah "<" kiri untuk membuat freezer lebih dingin 1°C.
2. Tekan tombol panah ">" kanan untuk membuat freezer lebih hangat 1°C.

Kisaran suhu Lemari Es: 0°C hingga 7°C

① KIAT DAN INFORMASI

Pengaturan freezer terdingin tidak disarankan untuk iklim normal dan sangat panas karena ini akan membatasi pendinginan ke bagian-bagian lemari es. Untuk iklim sangat dingin, freezer perlu diatur lebih dingin.

ALARM PINTU

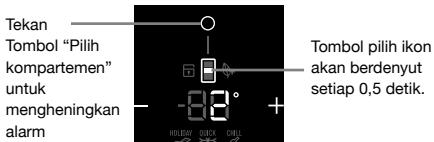


Jika pintu Freezer, Tengah, atau Makanan Segar dibiarkan terbuka selama lebih dari 2 menit, maka akan terdengar bunyi alarm dan "Ikon kompartemen" dan "Tombol pilih kompartemen" akan berdenyut setiap 0,5 detik. Tekan "Tombol Pintu" atau tutup pintu untuk menghentikan alarm. Tekan tombol apa pun untuk menghentikan alarm. Suara alarm akan mati selama 8 menit jika pintu masih terbuka. Jika alarm berbunyi kembali, menekan lagi tombol akan menghentikan alarm selama 8 menit lagi. Jika alarm Pintu diaktifkan, semua fungsi lainnya akan terkunci.

Hemat energi

Lemari es Anda telah dirancang dengan kelebihan hemat energi dan dapat digunakan dengan salah satu dari tiga modus (NORMAL, RAMAH LINGKUNGAN, LIBUR), tergantung tingkat kehematannya yang diinginkan.

Modus ECO (Ramah Lingkungan)

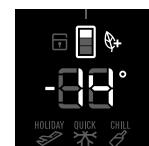


Jika ikon "ECO" yang berwarna hijau menyala, maka artinya lemari es Anda diatur untuk berjalan dengan cara yang efisien secara ekologis.

Ikon "ECO" akan muncul saat mengatur suhu kompartemen Freezer dari -18°C hingga -17°C, suhu kompartemen Tengah dari -2°C hingga 4°C, suhu kompartemen Makanan segar dari 3°C hingga 7°C.

Jika pengaturan suhu kompartemen di luar kisaran ini, atau fungsi Fast Freeze diaktifkan, ikon "ECO" akan hilang.

Modus Holiday

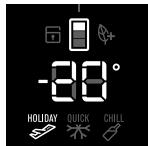


Modus Holiday dirancang untuk memanfaatkan kehematan energi dengan optimal saat Anda akan meninggalkan lemari es Anda untuk waktu yang lama. Tekan tombol "Modus" untuk memilih modus Holiday hingga ikon menyala. Ikon "ECO" tetap digunakan jika pengaturan suhu masih dalam kisaran modus Ramah Lingkungan. Modus Holiday dapat diaktifkan saat pintu dibuka. Modus Holiday yang diaktifkan secara manual harus dinonaktifkan secara manual. Modus Holiday Otomatis (30 jam tanpa ada interaksi manusia) akan dinonaktifkan jika tombol ditekan pada layar atau pintu dibuka.

Catatan: Modus Holiday dirancang untuk dioperasikan dengan kondisi pintu jarang dibuka (misalnya jika lemari es digunakan untuk penyimpanan jangka panjang), jika pintu sering dibuka saat modus Holiday aktif, maka makanan dapat membeku.

Modus Minuman Dingin

Gunakan Modus Minuman Dingin untuk mendinginkan minuman di freezer, dengan membunyikan alarm setelah 20 menit (default) untuk mengingatkan Anda untuk memindahkan botol. Tekan tombol "Modus" untuk memilih modus minuman dingin. Ikon "DINGIN" akan menyala. Layar numerik akan berubah menjadi "20".

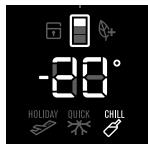

Penyesuaian waktu minimum adalah 5 menit dan waktu maksimum adalah 30 menit.

Sesuaikan pengaturan waktu dengan menggunakan tombol panah "<" dan ">".

Tiap sentuhan tombol akan menambah atau mengurangi 5 menit ke waktu dingin.

Saran waktu pendinginan:

- 10 menit untuk kaleng minuman
- 20 menit untuk botol anggur
- 30 menit untuk botol minuman ringan

Catatan: Jika alarm minuman dingin diaktifkan, semua fungsi lainnya terkunci.

Modus Fast Freeze



Gunakan modus Fast Freeze saat menambahkan banyak makanan ke kompartemen freezer. Suhu kompartemen freezer akan menampilkan -23°C. (Suhu ini tidak dapat diubah saat Anda menekan tombol "Mode" untuk memilih pembekuan cepat yang sekarang ini akan beroperasi selama 90 menit kemudian beralih ke operasi normal.)

Lampu LED


Lemari es Anda dilengkapi dengan lampu LED tahan lama. Seandainya lampu LED mati, maka lampu LED harus diservis oleh teknisi yang memenuhi syarat. Lihat halaman 29 untuk informasi kontak.

FITUR-FITUR

Bagian ini memberi tahu Anda cara mendapatkan hasil maksimal dari banyaknya fitur-fitur bermanfaat pada lemari es dan cara bersihkannya. Anda dapat menyesuaikan wadah lemari es untuk mencukupi kebutuhan penyimpanan yang berbeda.

Wadah penyimpanan di pintu (rak)

Lemari es dan freezer memiliki wadah penyimpanan di pintu. Anda dapat menyesuaikan wadah lemari es untuk mencukupi kebutuhan penyimpanan yang berbeda. Semua wadah di pintu dapat dilepas untuk dibersihkan. Jika ingin melepas atau menyesuaikan wadah, angkat dan miringkan untuk melepas. Untuk memasang kembali, miringkan bagian atas dan tekan wadah ke bawah hingga kunci penahan terpasang di tempatnya.

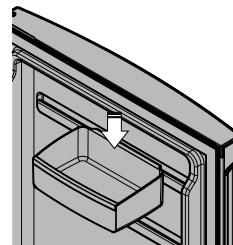

Kompartemen simpan aman (bilamana terpasang)

Anda dapat menggunakan kompartemen ini untuk menyimpan makanan dan barang lainnya. Untuk menggunakan kunci, tekan ke atas untuk membuka dan ke bawah untuk mengunci.


Laci sayur (Crisper bin)

Menyimpan sayuran

Gunakan laci sayur untuk menyimpan sayuran, buah-buahan, atau bahan makanan kecil. Anda dapat menyesuaikan kelembapan di dalam laci dengan menggeser pengatur kelembapan.


Menyimpan buah-buahan dan bahan makanan kecil

Anda dapat menyimpan buah-buahan di dalam laci buah, tetapi jangan lupa menurunkan kelembapan melalui pengatur kelembapan. Kelembapan dapat disesuaikan dengan menggeser tuas pada pengatur kelembapan.

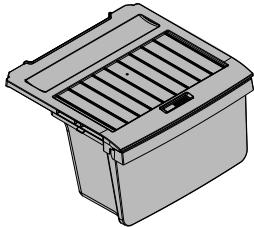


Menghilangkan bau

Lemari es Anda dilengkapi dengan Nano copper deodorizer untuk membantu menghilangkan bau makanan di dalam lemari es Anda. Menutup makanan dan membungkusnya dalam plastik juga membantu mengurangi bau di dalam lemari es Anda.

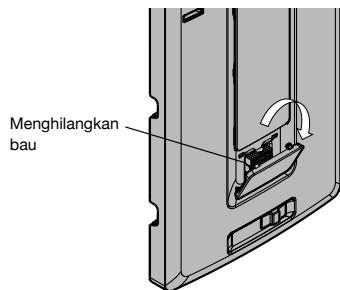

FITUR FREEZER ATAS

- ETB2302H-A
- ETB2302H-H

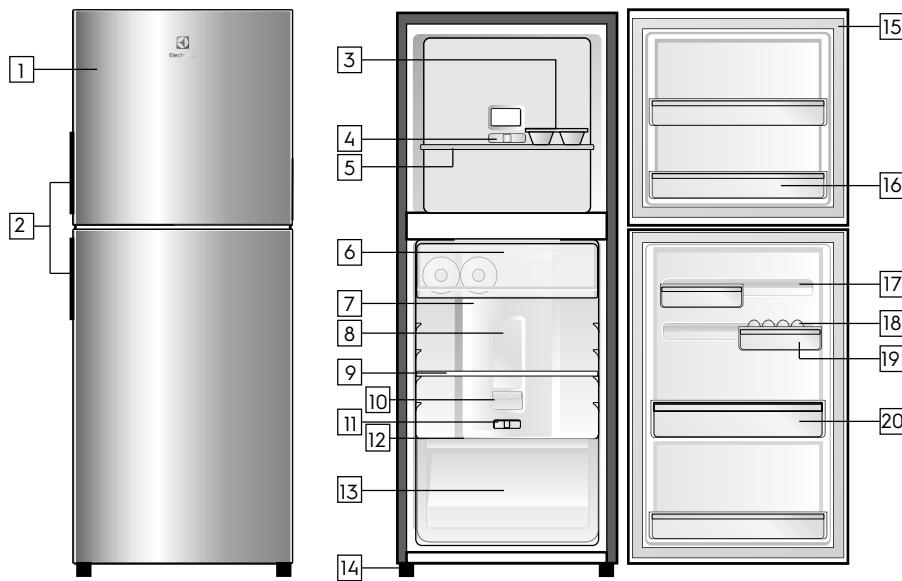

Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Pengatur Geser Lemari ES
2 Pegangan Pintu	12 Pengatur Geser Kelembapan
3 Wadah es batu	13 Laci sayur
4 Pengatur Geser Freezer	14 Kaki
5 Rak Freezer	15 Karet Pintu
6 Ruang pendingin	16 Wadah di Pintu
7 Multialiran	17 Rel FlexStor
8 Lampu Lemari Es	18 Wadah Telur
9 Rak	19 Laci FlexStor
10 Penutup Penghilang Bau	20 Wadah Botol

FITUR FREEZER ATAS

- ETB2502H-A
- ETB2502H-H




Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Pengatur Geser Lemari ES
2 Pegangan Pintu	12 Pengatur Geser Kelembapan
3 Wadah es batu	13 Laci sayur
4 Pengatur Geser Freezer	14 Kaki
5 Rak Freezer	15 Karet Pintu
6 Ruang pendingin	16 Wadah di Pintu
7 Multialiran	17 Rel FlexStor
8 Lampu Lemari Es	18 Wadah Telur
9 Rak	19 Laci FlexStor
10 Penutup Penghilang Bau	20 Wadah Botol

FITUR FREEZER ATAS

- ETB2802H-A
- ETB2802H-H

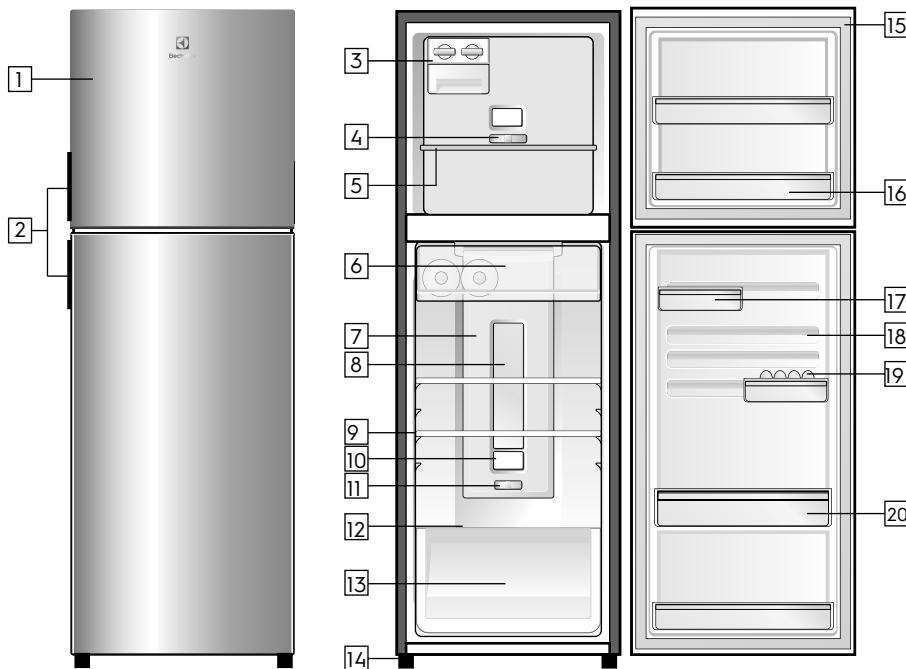


Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Pengatur Geser Lemari ES
2 Pegangan Pintu	12 Pengatur Geser Kelembapan
3 Pembuat ice Twist & Serve	13 Laci sayur
4 Pengatur Geser Freezer	14 Kaki
5 Rak Freezer	15 Karet Pintu
6 Ruang pendingin	16 Wadah di Pintu
7 Multialiran	17 Laci FlexStor
8 Lampu Lemari Es	18 Rel FlexStor
9 Rak	19 Wadah Telur
10 Penutup Penghilang Bau	20 Wadah Botol

FITUR FREEZER ATAS

- ETB3400H-A
- ETB3700H-A
- ETB3400H-H
- ETB3700H-H

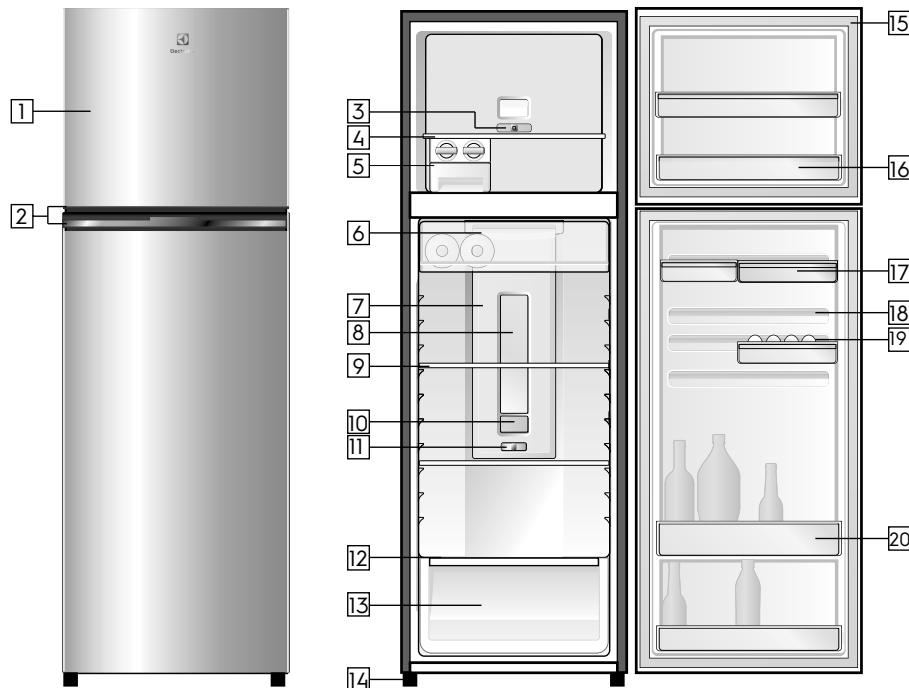


Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Pengatur Geser Lemari ES
2 Pegangan Pintu	12 Pengatur Geser Kelembapan
3 Pengatur Geser Freezer	13 Laci sayur
4 Rak Freezer	14 Kaki
5 Pembuat ice Twist & Serve	15 Karet Pintu
6 Ruang pendingin	16 Wadah di Pintu
7 Multialiran	17 Laci FlexStor
8 Lampu Lemari Es	18 Rel FlexStor
9 Rak	19 Wadah Telur
10 Penutup Penghilang Bau	20 Wadah Botol

FITUR FREEZER BAWAH

- EBB2802H-A
- EBB2802H-H

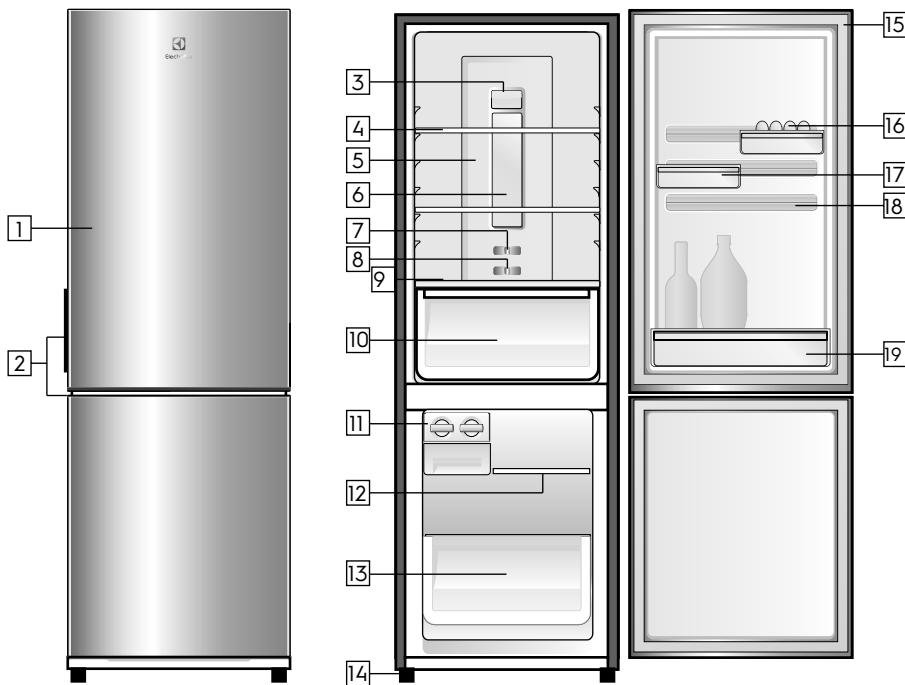


Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Pembuat ice Twist & Serve
2 Pegangan Pintu	12 Rak Freezer
3 Penutup Penghilang Bau	13 Laci Freezer
4 Rak	14 Kaki
5 Multialiran	15 Karet Pintu
6 Lampu Lemari Es	16 Wadah Telur
7 Pengatur Geser Lemari ES	17 Laci FlexStor
8 Pengatur Geser Freezer	18 Rel FlexStor
9 Pengatur Geser Kelembapan	19 Wadah Botol
10 Laci sayur	

FITUR FREEZER BAWAH

- EBB3400H-A
- EBB3700H-A
- EBB3400H-H
- EBB3700H-A

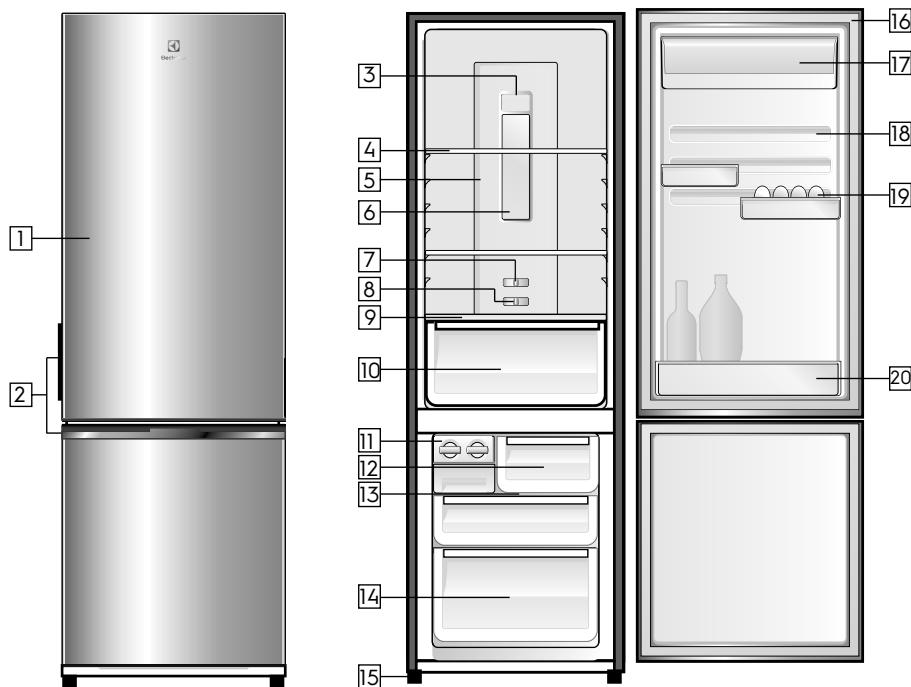


Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Pembuat ice Twist & Serve
2 Pegangan Pintu	12 Laci Daging
3 Penutup Penghilang Bau	13 Rak Freezer
4 Rak	14 Laci sayur
5 Multialiran	15 Kaki
6 Lampu Lemari Es	16 Karet Pintu
7 Pengatur Geser Lemari ES	17 Laci FlexStor
8 Pengatur Geser Freezer	18 Rel FlexStor
9 Pengatur Geser Kelembapan	19 Wadah Telur
10 Laci sayur	20 Wadah Botol

FITUR FREEZER MULTI ATAS

- EME2800H-A • EME3700H-A
- EME2800H-H • EME3700H-H

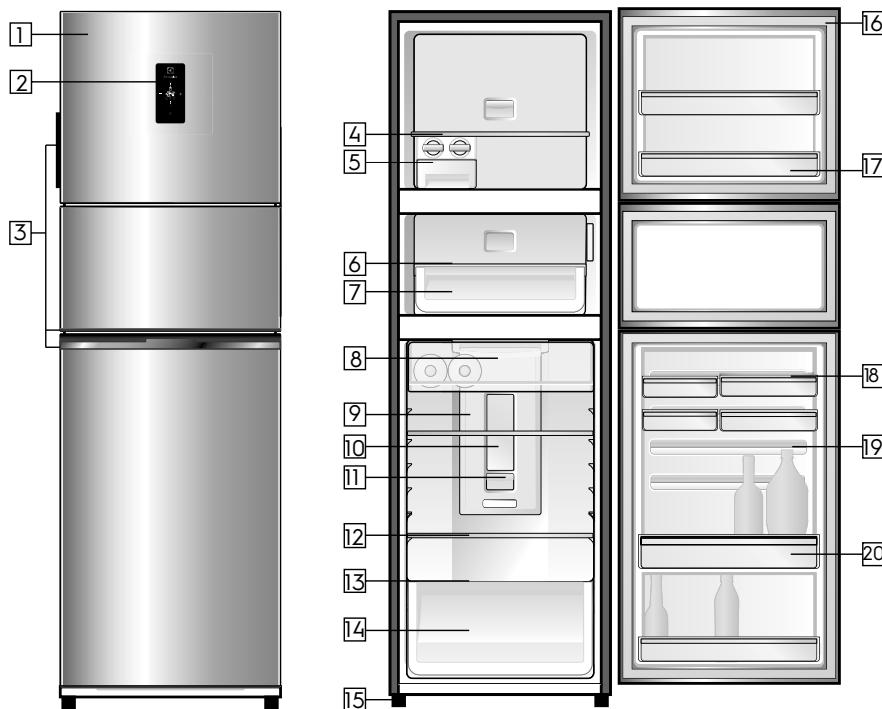

Perincian fitur lemari es (bilamana terpasang):

1 Pintu	11 Penutup Penghilang Bau
2 Pengatur Suhu Lemari Es	12 Rak
3 Pegangan Pintu	13 Pengatur Geser Kelembapan
4 Rak Freezer	14 Laci sayur
5 Pembuat ice Twist & Serve	15 Kaki
6 Rak Pintu Tengah	16 Karet Pintu
7 Wadah Pintu Tengah	17 Laci FlexStor
8 Ruang pendingin	18 Wadah Telur
9 Multialiran	19 Rel FlexStor
10 Lampu Lemari Es	20 Wadah Botol

PANDUAN PENYIMPANAN MAKANAN

KATEGORI	PRODUK	LEMARI ES	FREEZER	KIAT PENYIMPANAN
DAGING	Sosis dan Daging Cincang	1-2 Hari	2-3 Bulan	Simpan daging dingin di bagian belakang
	Potongan Daging dan Steak	3-4 Hari	4-6 Bulan	Plastik menyebabkan daging mengeluarkan air jika disimpan di lemari es lebih dari sehari
	Daging Dingin	3-5 Hari	4-6 Bulan	
	Makanan panggang	3-5 Hari	12 Bulan	Makanan panggang membutuhkan waktu hingga 48 jam hingga mencair seluruhnya, pindahkan makanan panggang beku ke lemari es 2 hari sebelum dikonsumsi.
UNGGAZ	Ayam	1-2 Hari	2 Bulan	Jika Anda ragu dengan bau dan warna unggas sebaiknya dibuang
	Ayam Panggang	3-5 Hari	12 Bulan	
	Telur	6 Minggu	Tidak Cocok	Telur utuh tidak cocok untuk dibekukan, telur yang sudah dikocok dapat dibekukan hingga 4 bulan
SEAFOOD	Ikan utuh dan fillet	2-3 Hari	2 Bulan	Simpan dalam wadah kedap udara atau aluminium foil.
	Lobster dan kepiting	1-2 Hari	2 Bulan	
	Udang	1-2 Hari	2 Bulan	Jangan bukukan udang dalam air garam
PRODUK SUSU	Susu	Sampai Tanggal Kedaluwarsa	Tidak Cocok	Jika Anda ragu dengan bau dan warnanya sebaiknya dibuang
	Yoghurt	7-10 Hari	Tidak Cocok	
	Keju Keras	2 Minggu –2 Bulan	2 Bulan (Parut)	Tergantung jenisnya, keju keras bertahan antara 2 minggu hingga 2 bulan.
	Keju Lunak	1-2 Minggu	Tidak Cocok	
	Mentega	8 Minggu	12 Bulan	
BUAH-BUAHAN & SAYUR-SAYURAN	Setiap buah dan sayuran memiliki daya tahan yang berbeda-beda. Beberapa di antaranya tetap segar selama beberapa hari, misalnya kacang-kacangan, yang lainnya dapat bertahan selama beberapa bulan, misalnya bawang bombay.		8-12 Bulan Saat membekukan potong kecil-kecil dan rendam sebentar dalam air mendidih.	Simpan sayuran di dalam laci dan jauhkan dari ventilasi udara agar tidak membeku. Jangan cuci buah-buahan dan sayuran sebelum menyimpannya di dalam lemari es karena hal ini dapat membuatnya membusuk.
SISA MAKANAN	Makanan buatan sendiri	3-4 Hari	2-6 Bulan	Simpan dalam wadah rapat Bukukan daging dalam ukuran kecil agar tidak banyak yang teruang.

PENYELESAIAN MASALAH

Jika menemukan ada yang salah dengan lemari es, Anda dapat melakukan beberapa pemeriksaan mudah sebelum meminta bantuan servis. Anda mungkin dapat memperbaiki masalah dan menghemat waktu dan biaya, dan menghindarkan Anda dari ketidaknyamanan.

PENYELESAIAN MASALAH

Jika menemukan ada yang salah dengan lemari es, Anda dapat melakukan beberapa pemeriksaan mudah sebelum meminta bantuan servis. Anda mungkin dapat memperbaiki masalah dan menghemat waktu dan biaya, dan menghindarkan Anda dari ketidaknyamanan.

Masalah	Solusi
Saat lemari es Anda tidak beroperasi	<ul style="list-style-type: none">Periksa apakah kabel daya dicolokkan ke stopkontak daya dengan benar dan apakah stopkontak tersebut menyala.Coba nyalakan peralatan listrik lain dari stopkontak daya yang sama. Jika tidak ada aliran listrik dari stopkontak, mungkin sekiranya Anda putus atau ada kesalahan pada sirkuit pemasok daya rumah tangga Anda.Cobalah menyesuaikan pengatur suhu ke posisi yang agak lebih dingin.Jika kipas freezer TIDAK berputar saat siklus pencairan otomatis atau sesaat setelah lemari es dinyalakan, itu normal.
Jika ada suara di lemari es	<ul style="list-style-type: none">Lemari es Anda menggunakan komponen hemat energi yang menghasilkan suara berbeda dengan lemari es lama Anda.Terkadang, terdengar suara gemericik refrigeran yang mengalir atau suara bagian-bagian yang memuai atau mengerut.Suara-suara ini sangat normal. Jika lemari es bergerincing atau menghasilkan suara bergetar, periksa apakah lemari es sama tinggi atau sesuaikan kaki perata.
Jika ada bau dari dalam lemari es	<ul style="list-style-type: none">Interior mungkin perlu dibersihkan.Beberapa makanan berbau tajam dan harus ditutup rapat.
Jika suhu dalam lemari es terlalu hangat	<ul style="list-style-type: none">Periksa apakah lemari es memiliki jarak ruang yang cukup di sisi belakang dan atas. Lihat petunjuk pemasangan di bagian depan buklet ini.Lihat bagian 'Pengatur Suhu'.Pintu mungkin dibuka terlalu lama atau terlalu sering.Wadah makanan atau pengemasan mungkin menahan pintu
Jika suhu dalam lemari es terlalu dingin	<ul style="list-style-type: none">Lihat bagian 'Pengatur Suhu'.Naikkan suhu untuk menghindari tingginya konsumsi energi.


SERVICE REQUEST

Jika ada masalah, dan masalah tersebut tetap terjadi setelah Anda memeriksanya, hubungi Pusat Servis terdekat atau dealer tempat Anda membeli lemari es. Bersiaplah untuk menuliskan nomor model, yang tertera pada label pada penutup dinding kompartemen plastik di bagian dalam lemari es.

Pemberitahuan Penting

Sebelum menelepon teknisi servis, harap baca petunjuk pengoperasian, buklet servis, serta syarat dan ketentuan jaminan dengan teliti.

Suara

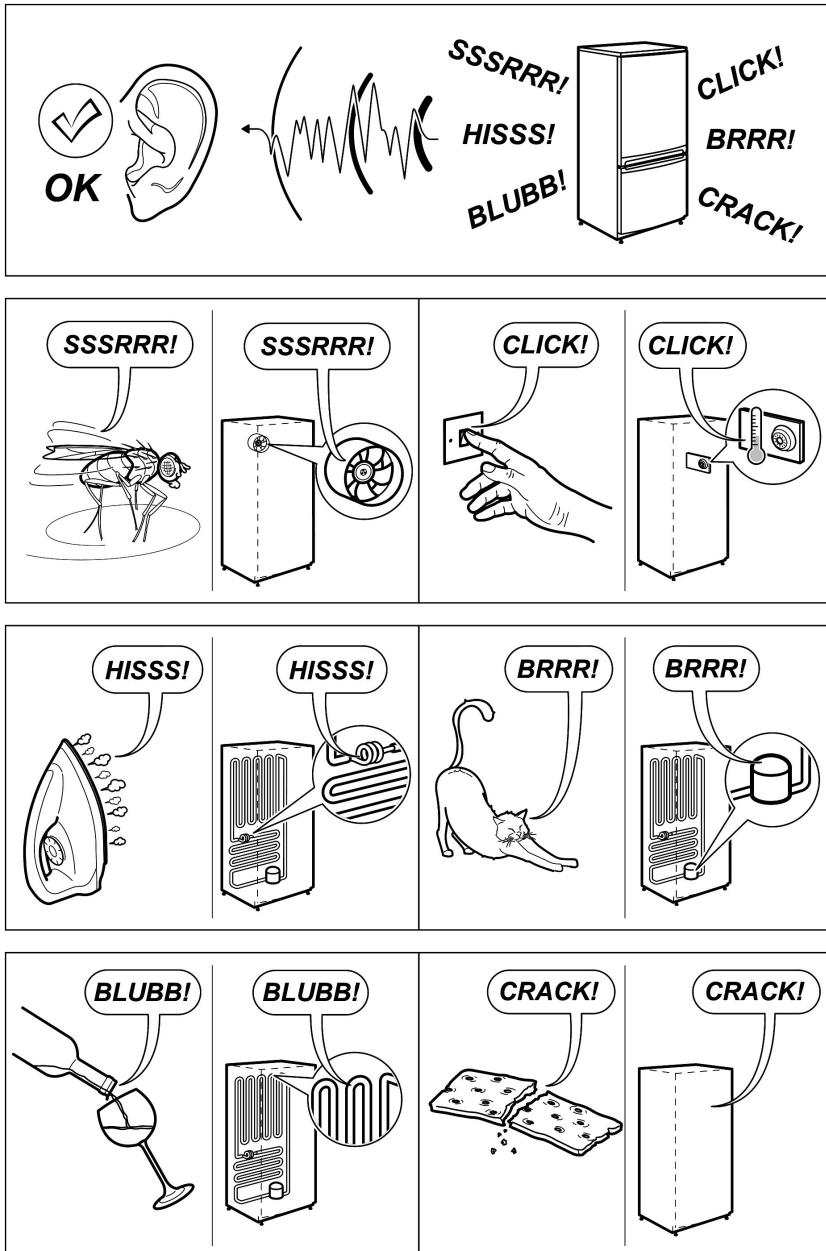

Inovator desain cerdas

Ingatkah saat terakhir kali Anda membuka kado dan memekik ‘ini yang aku mau!’ Perasaan seperti itulah yang ingin dibangkitkan desainer di Electrolux dalam diri siapa pun yang memilih atau menggunakan salah satu produk kami. Kami menggunakan segenap waktu, pengetahuan, dan pemikiran mendalam dalam memperhitungkan dan menciptakan jenis peralatan yang sangat dibutuhkan dan diinginkan pelanggan kami.

Kepedulian mendalam semacam ini berarti berinovasi dengan wawasan. Bukan mendesain untuk desain semata, tetapi mendesain untuk pengguna. Bagi kami, pemikiran desain secara mendalam berarti menjadikan peralatan lebih mudah digunakan, melakukan pekerjaan menjadi lebih menyenangkan, dan memungkinkan pelanggan kami merasakan kemewahan tertinggi dan ketenteraman jiwa. Tujuan kami adalah menyiapkan ketenteraman jiwa ini untuk lebih banyak orang di seluruh dunia, dalam setiap sisi kehidupan sehari-hari mereka. Jadi, ketika kami mengatakan bahwa kami memikirkan Anda, kami bersungguh-sungguh melakukannya.

Electrolux. Thinking of you

**Bagikan pemikiran kami lainnya di
www.electrolux.com**





DETAIL KONTAK LAYANAN PELANGGAN ELECTROLUX

Indonesia

CUSTOMER CARE CENTER:

Electrolux Building

Jl.Abdul Muis No.34, Petojo Selatan, Gambir
Jakarta Pusat 10160

Contact Center

0804 111 9999*

*Note : Rp. 450/mnt tarif flatseluruhindonesia

Email : customercare@electrolux.co.id

SMS & WA : 0812.8088.8863



Share more of our thinking at electrolux.com.


P/No: A12081616



ETB2502H-A, ETB2502H-H, ETB2302H-A,
ETB2302H-H, ETB2802H-A, ETB2802H-H,
ETB3400H-A, ETB3400H-H, ETB3700H-A,
ETB3700H-H, EBB2802H-A, EBB2802H-H,
EBB3400H-A, EBB3400H-H, EBB3700H-A,
EBB3700H-H, EME2800H-A, EME2800H-H,
EME3700H-A, EME3700H-H

EASY WAY TO REGISTER YOUR PRODUCT WITH YOUR SMARTPHONE

- 1** **Photograph** the camera icon located on your product's serial tag, including the 4 dots (◎).

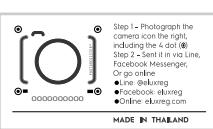

Step 1 - Photograph the camera icon on the right, including the 4-dot (◎).
 Step 2 - Share via Line, Facebook Messenger, Or go online.
 • Line
 • Facebook
 • @eluxreg
 • eluxreg.com
 • eluxreg.com

- 2** **Send it in** via Line, Facebook Messenger or go online.

 @eluxreg
 eluxreg
 eluxreg.com

- 3** **Enjoy** many privileges.*

* Terms and conditions apply.



Electrolux

ENG



Thank You for choosing Electrolux!

Congratulations and thank you for choosing an Electrolux refrigerator/freezer. We are sure you will find your new appliance a pleasure to use. Before you start using the appliance, we recommend you read through the entire user manual which describes the appliance and its many functions. To avoid any unnecessary risks, misuse or hazards that may be present when using a new electrical appliance, it is important you read the safety instructions carefully. We recommend you keep this user manual for future reference and pass it on to future owners. After unpacking the appliance, please check that it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Customer Care Centre.

CONTENTS

Important Safety Information	3
Installing and Cleaning the Refrigerator	4
Temperature Control	5
LED Lighting	7
Door Storage Bins	7
Crisper Bin	7
- Storing Vegetables	
- Storing Fruits and Small Items	
Deodorizer	8
Refrigerator Features	9
Food Storage Guide	16
Troubleshooting	17
Noise	18

**RoHS
Compliant**

Being ensured the permissible content limitation of
some toxic chemicals (RoHS compliant)
(According to the Circular No. 30/2011/TT-BCT Vietnam,
dated 10th August, 2011)



ENVIRONMENTAL TIP

Disposal information for users

Most of the packing materials are recyclable. Please dispose these materials through your local recycling depot or place them in appropriate collection containers.

If you wish to discard this appliance, please contact your local authorities and ask for the correct method of disposal. These products are RoHS compliance.

Conditions of use

This appliance is intended to be used in household and similar applications such as,

- Staff kitchen areas in shops, offices and other working environments;
- Farm house and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications;

Please read the user manual carefully and keep it in a handy place for later reference.

The symbols you see in this manual have the following meanings:



WARNING

This symbol indicates information concerning your personal safety.



CAUTION

This symbol indicates information on how to avoid damaging the appliance.



TIPS AND INFORMATION

This symbol indicates tips and information about the use of the appliance.



ENVIRONMENTAL TIP

This symbol indicates tips and information about economical and ecological use of the appliance.

MEANING OF SYMBOLS



This symbol indicates to never do this.



This symbol indicates to always do this.



TIPS AND INFORMATION

Important: Check for any damages or marks. If you find that the refrigerator is damaged or marked, you must report this within 7 days if you wish to claim for damages/marks under the manufacturer's warranty. This does not affect your statutory rights.



WARNING



If pressurised aerosol containers bear the word 'Flammable' and/or a small flame symbol, do not store them inside any refrigerator. If you do so, you may cause an explosion.

When you dispose of refrigerators and freezers, remove all doors. Children can suffocate if they get trapped inside. This refrigerator contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.



WARNING

! This appliance must be plugged into its own dedicated 220-240V, 50/60Hz AC electrical outlet

! Ensure that the electrical outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.

! Do not use an extension cord or adapter plug.

! If the power cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified personnel in order to avoid a hazard.

! Unplug the appliance before cleaning and before changing the light bulb to avoid electric shock.

! Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord. Choose a location that is not too cold for installation.

! The temperature should be above 10 degrees °C.

! Put the appliance in a dry place, avoiding areas of high moisture or humidity.

! Do not place the appliance in frosty or unprotected areas, such as in a garage or on a verandah.

! Do not place the appliance in direct sunlight.

! Do not place the appliance near stoves, fires or heaters.

! The plug must be accessible when the appliance is in position.



WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please follow these tips;

! Never let children play with the refrigerator.

! Never store fizzy drinks in the freezer compartment.

! Never try to repair the refrigerator on your own.

! Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.


! Never use electrical appliances inside the storage areas.



WARNING

Stability Foot

When you refrigerator is in place, wind down the stability foot to the floor to stabilise it. Lift the front of the refrigerator to take the weight off the stability foot, then turn it 1/4 turn further to ensure firm contact with the floor. If you do move the refrigerator, remember to wind it back up, to allow the refrigerator to roll. Remember to reset it when reinstalling.

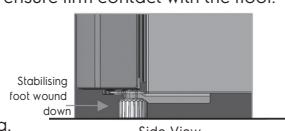

R600A REFRIGERANT WARNING

- This appliance contains flammable R600a refrigerant. Avoid safety hazards by carefully installing, handling, servicing and disposing of this appliance. If your appliance contains R600a it will be indicated on the rating plate inside the appliance.
- Ensure that the tubing of the refrigerant circuit is not damaged during transportation and installation.
- In the event any damage accidentally occurs, keep the appliance away from open fires and any devices that produce sparks or arcs and luminaries during normal or abnormal operation, and unplug the appliance at the power point. Call authorized service for necessary action and advice.
- Leaking refrigerant may ignite vent area if leak occurs.
- The room for installing appliance must be at least 1m³ per 8g of refrigerant. The amount and type of refrigerant in the appliance can be found on the rating plate inside the appliance.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING

- Do not use a steam cleaner. If live components come in contact with the condensing steam, they may short circuit or cause an electric shock.
- Do not plug the appliance into a timer fitted to the power point.
- Do not put your appliance on an uneven surface.
- Do not store explosive substances such as aerosol cans with flammable propellant in the appliance.
- Do not store fizzy drinks in the freezer compartment.
- Never try to repair the refrigerator on your own. Use only a qualified or authorised service person for repairs.
- Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.

Installing Your New Refrigerator


Clean the refrigerator thoroughly according to instruction, and wipe away any dust that has accumulated during shipping.

Check that the floor is level. If it is not then adjust the provided levelling leg so product is level and stable.

We recommend that you let your refrigerator run for two to three hours before you put any food in it. This will allow you to check that it is operating properly and that enough cool air is going to the freezer.

Clearance around your Top and Bottom Mount refrigerator

- Allow a minimum of 30mm clearance on both sides of the refrigerator.
- Allow 50mm clearance at the back of the refrigerator.
- Allow a minimum of 10mm clearance above the hinge cover.
- If you do not have a cupboard with allowance for air flow above the refrigerator, the recommended clearance area on top increases to 90 mm.
- When positioned in a corner area, spacing of at least 350mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

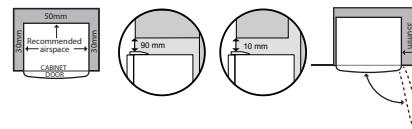

NOTE: In installation where both sides and the rear of the refrigerator are not enclosed by cabinetry eg the refrigerator is placed against a wall, the clearance between the rear of refrigerator and the wall should not be greater than 75mm.

You refrigerator uses energy efficient components that may produce different noises (Refer "Noises" page for examples) to your old refrigerator. Occasionally a gurgling sound of refrigerator flowing or the sound of parts expanding and contracting can be heard. These noises are quite normal.

Cleaning Your Refrigerator

Exterior

You should only clean your refrigerator with lukewarm soapy water and a soft cloth. Rinse with clean water and then wipe the surface with a soft clean cloth to remove any soap residue.

Interior

You should clean the refrigerator interior regularly. Wash the interior with a soft cloth and lukewarm soapy water. Thoroughly dry all surfaces and removable parts. Avoid getting water on refrigerator controls. If you have taken out any removable parts, replace them and switch the power on before restocking the refrigerator with food. Naturally, you should keep the interior of your refrigerator hygienic by promptly and thoroughly wiping up any food spills.

WARNING

Never use hot water, solvents, commercial, caustic or abrasive cleaners, or scourers to clean this appliance as they will damage it. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. When cleaning, use only a soft cloth and lukewarm soapy water.

TEMPERATURE CONTROL

When you first turn on the refrigerator, set both the refrigerator and freezer temperature control to normal. Please refer to the below section for information on adjusting refrigerator and freezer temperature.


TIPS AND INFORMATION

Changing setting

When you change the temperature settings, make small adjustments and wait 24 hours before assessing whether you need to make any further changes.

For Top Freezer models


Freezer temperature setting recommendation

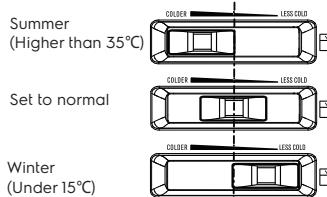

Refrigerator temperature adjustment


1. Select the refrigerator control
2. Slide the control to the left to set it to colder
3. Slide the control to the right to set less cold

Refrigerator temperature setting recommendation

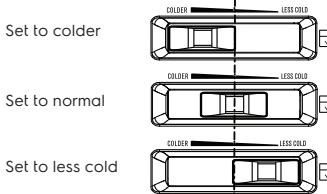

For Bottom Freezer models


Freezer temperature setting recommendation

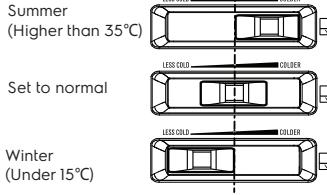

Refrigerator temperature adjustment

1. Select the refrigerator control
2. Slide the control to the left to set it to less colder
3. Slide the control to the right to set cold

Refrigerator temperature setting recommendation

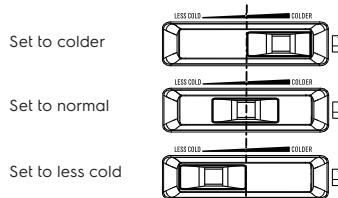

TIPS AND INFORMATION

Setting the freezer temperature to colder is not recommended for normal or very hot climate condition as this will limit the cooling capacity to other sections of the refrigerator. In very cold climate the freezer will need to be set colder.

DOOR ALARM

If the refrigerator door is left open longer than two minutes, a buzzer will sound. Re-set the alarm by pressing the Light switch or closing the door.

TEMPERATURE CONTROL


For Multi Top Freezer models

We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 3°C and the freezer to -18°C. If you want to change the temperatures, use the instructions below. You should make only small adjustments and wait 24 hours to see whether you need to make further changes.


TIPS AND INFORMATION

When you set a temperature, you set an average temperature for the whole appliance cabinet. Temperatures inside each compartment may vary, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.

How to select the compartment to set temperature

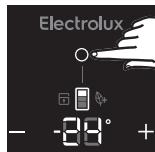

Use "Compartment Select" button to highlight freezer, middle or fresh food compartment temperature setting.

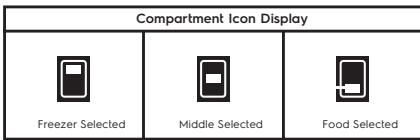

Adjusting the freezer temperature



1. Press left "<" arrow button to make the freezer colder in 1°C steps.
2. Press right ">" arrow button to make the freezer warmer in 1°C steps.

The Freezer temperature range: -23°C to -14°C


Adjusting the middle temperature



1. Press left "<" arrow button to make the middle colder in 1°C steps.
2. Press right ">" arrow button to make the middle warmer in 1°C steps.

The Middle temperature range: -12°C to 3°C

Adjusting the refrigerator temperature

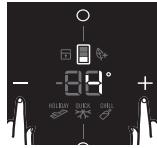


1. Press left "<" arrow button to make the middle colder in 1°C steps.

2. Press right ">" arrow button to make the middle warmer in 1°C steps.

The Refrigerator temperature range: 0°C to 7°C

TIPS AND INFORMATION

Coldest freezer setting is not recommended in normal and very hot climates as this will limit the cooling to the refrigerator sections. In very cold climates the freezer will need to be set colder.

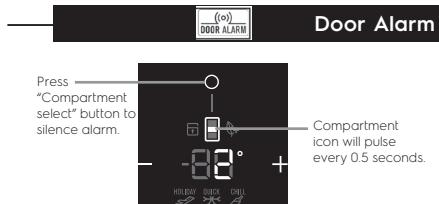

Press ← "Compartment select" button to silence alarm.

Door Alarm

()


DOOR ALARM

Compartment icon will pulse every 0.5 seconds.

If the Freezer, Middle or Fresh food doors are left open for longer than 2 minutes. The buzzer will sound and "Compartment icon" and "Compartment select button" will pulse every 0.5 seconds. Press "Door Switch" or close the door to stop alarm. Press any button to silence alarm. Alarm sound will mute for 8 minutes if the door is still open. If the alarm resounds then pressing the button again will silence the alarm for a further 8 minutes. When door alarm is activated, all other functions are locked out.

Energy efficiency

Your appliance has been designed with energy efficiency in mind and can operate in any of three modes (NORMAL, ECO, HOLIDAY), depending on the level of efficiency sought.

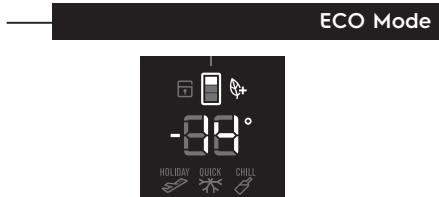


When the green "ECO" icon is illuminated, it means your appliance is set to run in an ecologically

The "ECO" icon will appear when setting Freezer compartment temperature from -18°C to -17°C, Middle compartment temperature from -2°C to 4°C and Fresh food compartment temperature from 3°C to 7°C.

If any compartment temperature setting is outside of this range, or the Quick Freeze function is active, the "ECO" icon will disappear.

Holiday Mode

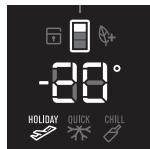


Holiday mode is designed to take advantage of maximum energy efficiency when you will be away from your appliance for an extended period. Press "Modes" button to select holiday mode until "HOLIDAY" icon illuminates. "ECO" icon stay on if temperature setting still in the Eco mode range. Holiday mode can be activated while the door is opened. Manually enabled Holiday mode must be manually deactivated. Automatic Holiday mode (30hours of on human interaction) deactivates if button is pressed on the display or door is opened.

NOTE: Holiday mode is designed to operate with minimum door opening (e.g. if fridge is used for long term storage), frequent door opening in Holiday mode could lead to food spoilage.

Drink Chill Mode

Use the Drink Chill Model for chilling drinks in the freezer, sounding an alarm after 20 minutes (default) to remind you to remove the bottles. Press the "Modes" button to select drink chill mode. "CHILL" icon will illuminate. The numerical display will change to "20".

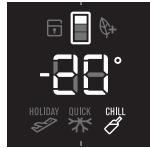

The minimum time adjustment is 5 minutes and maximum time is 30 minutes.

Adjust the timer by using arrow button "<" and ">".

Each button touch will add or decrease 5 minutes to the chill time.

Suggested chilling times:

- 10 minutes for cans of drink
- 20 minutes for bottles of wine
- 30 minutes for bottles of soft drink

NOTE: When drink chill alarm is activated, all other functions are locked out.

Quick Freeze Mode



Use the quick freeze mode when you add a large amounts of food to the freezer compartment. The freezer compartment temperature will show -23°C. (This temperature cannot be changed while pressing the "Modes" button to select quick freeze will now operate for 90 minutes then switch to normal operation.)

LED Lighting


Your refrigerator is fitted with long life LED lighting. In the unlikely event the LED lights should ever fail, then the LED lights need to be serviced by a qualified technician. Refer to page 14 for contact details.

FEATURES

This section tells you how to make the most of the many useful features of the refrigerator and how to clean them. You can adjust the refrigerator bins to meet different storage needs.

Door storage bins (shelves)

Both the refrigerator and freezer have door storage bins. You can adjust the refrigerator bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift and tilt to remove. To replace, tilt the top and push bin down until the support lugs lock it in place.

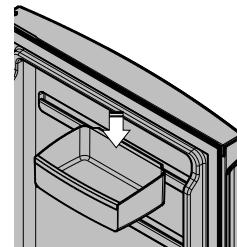

Store safe compartment (where fitted)

You can use this compartment to store food and other items. To operate lock, push up to open and down to lock.


Crisper bin

Storing vegetables

Use the crisper bin to store vegetables, fruits or small items. You can adjust the humidity inside the bin by sliding the humidity control.


Storing fruits and small items

You can store fruits in the crisper bin, but do remember to lower the humidity via the humidity can be adjusted by the sliding the lever on the humidity control.

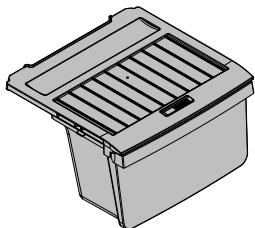


Deodorizer

Your refrigerator is fitted with Nano copper deodorizer to assist with the removal of food odours inside your refrigerator. Keeping the food covered and wrapping it in plastic will also help to reduce the odours inside your refrigerator.

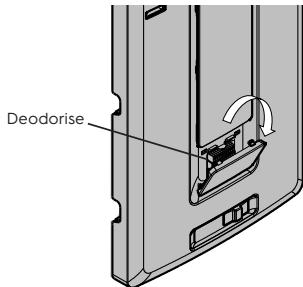

TOP FREEZER FEATURES

- ETB2302H-A
- ETB2302H-H

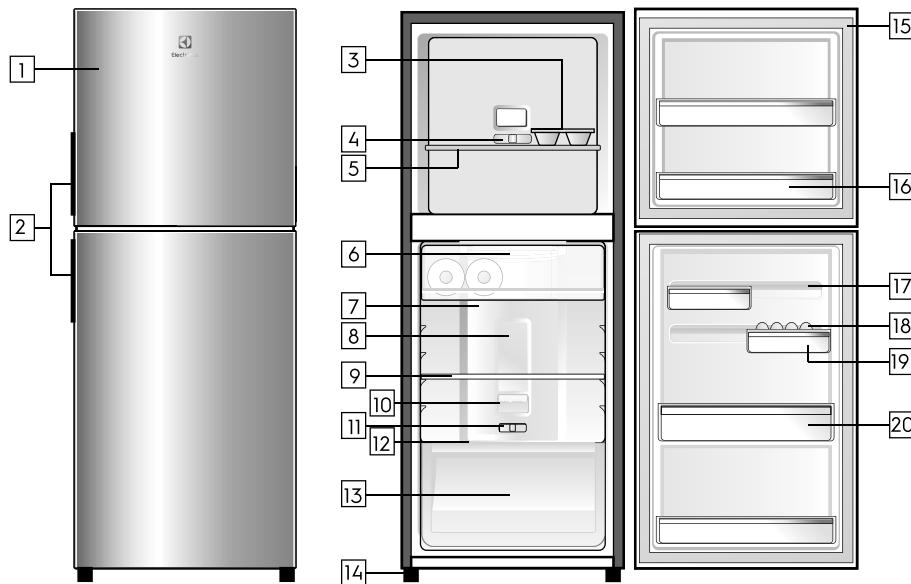

The details of the refrigerator feature:

1	Doors	11	Slide Control Refrigerator
2	Door Handles	12	Humidity Slide
3	Ice Tray	13	Crisper
4	Slide Control Freezer	14	Feet
5	Freezer Shelf	15	Gaskets
6	Chill room	16	Door Bins
7	Multi Flow	17	FlexStor Rails
8	Refrigerator Light	18	Egg Tray
9	Shelf	19	FlexStor Bins
10	Deodoriser Cover Refrigerator	20	Bottle Bins

TOP FREEZER FEATURES

- ETB2502H-A
- ETB2502H-H




The details of the refrigerator feature:

1	Doors	11	Slide Control Refrigerator
2	Door Handles	12	Humidity Slide
3	Ice Tray	13	Crisper
4	Slide Control Freezer	14	Feet
5	Freezer Shelf	15	Gaskets
6	Chill room	16	Door Bins
7	Multi Flow	17	FlexStor Rails
8	Refrigerator Light	18	Egg Tray
9	Shelf	19	FlexStor Bins
10	Deodoriser Cover Refrigerator	20	Bottle Bins

TOP FREEZER FEATURES

- ETB2802H-A
- ETB2802H-H

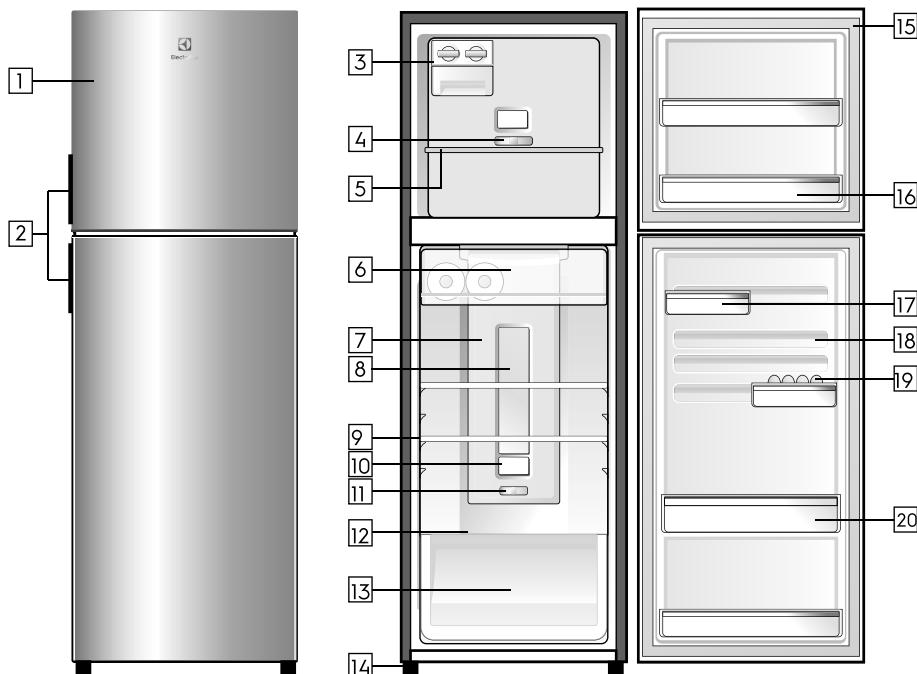


The details of the refrigerator feature:

1	Doors	11	Slide Control Refrigerator
2	Door Handles	12	Humidity Slide
3	Ice twist & serve	13	Crisper
4	Slide Control Freezer	14	Feet
5	Freezer Shelf	15	Gaskets
6	Chill room	16	Door Bins
7	Multi Flow	17	FlexStor Bins
8	Refrigerator Light	18	FlexStor Rails
9	Shelves	19	Egg Tray
10	Deodoriser Cover Refrigerator	20	Bottle Bins

TOP FREEZER FEATURES

- ETB3400H-A
- ETB3400H-H
- ETB3700H-A
- ETB3700H-H

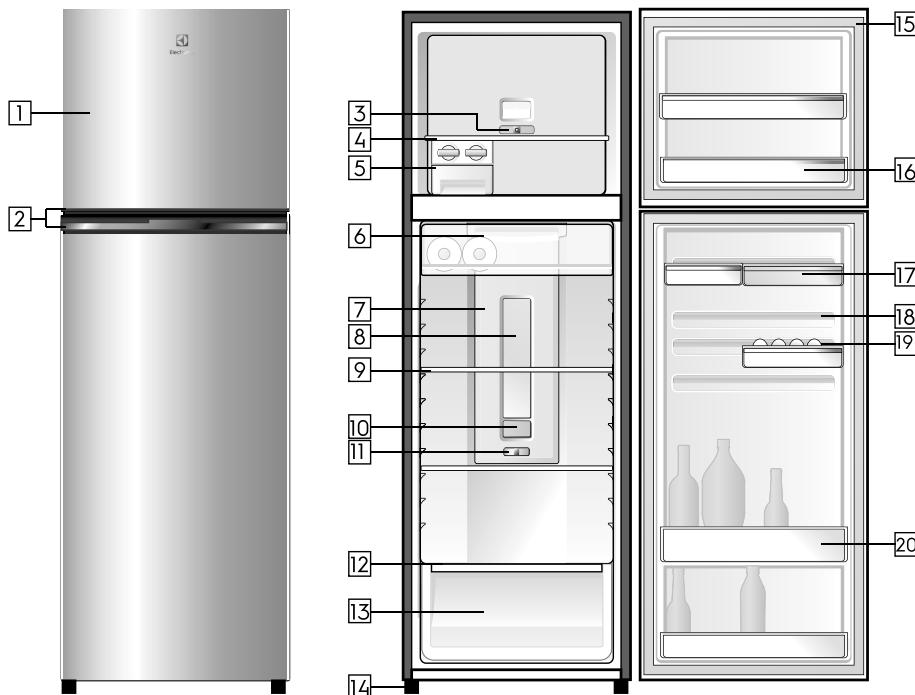


The details of the refrigerator feature:

1	Doors	11	Slide Control Refrigerator
2	Door Handles	12	Humidity Slide
3	Slide Control Freezer	13	Crisper
4	Freezer Shelf	14	Feet
5	Ice Twist & Serve	15	Gaskets
6	Chill room	16	Door Bins
7	Multi Flow	17	FlexStor Bins
8	Refrigerator Light	18	FlexStor Rails
9	Shelves	19	Egg Tray
10	Deodoriser Cover Refrigerator	20	Bottle Bins

BOTTOM FREEZER FEATURES

- EBB2802H-A
- EBB2802H-H

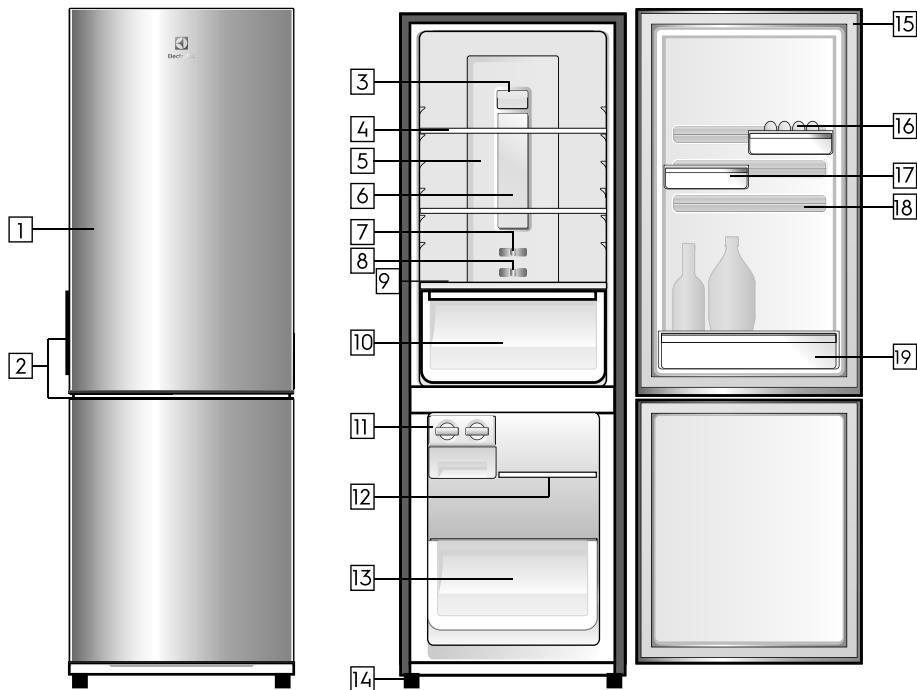


The details of the refrigerator feature:

1	Doors	11	Ice Twist & Serve
2	Door Handles	12	Freezer Shelf
3	Deodoriser Cover	13	Freezer Drawer
4	Shelves	14	Feet
5	Multi Flow	15	Gaskets
6	Refrigerator Light	16	Egg Tray
7	Slide Control Refrigerator	17	FlexStor Bins
8	Slide Control Freezer	18	FlexStor Rails
9	Humidity Slide	19	Bottle Bins
10	Crisper		

BOTTOM FREEZER FEATURES

- EBB3400H-A
- EBB3400H-H
- EBB3700H-A
- EBB3700H-H

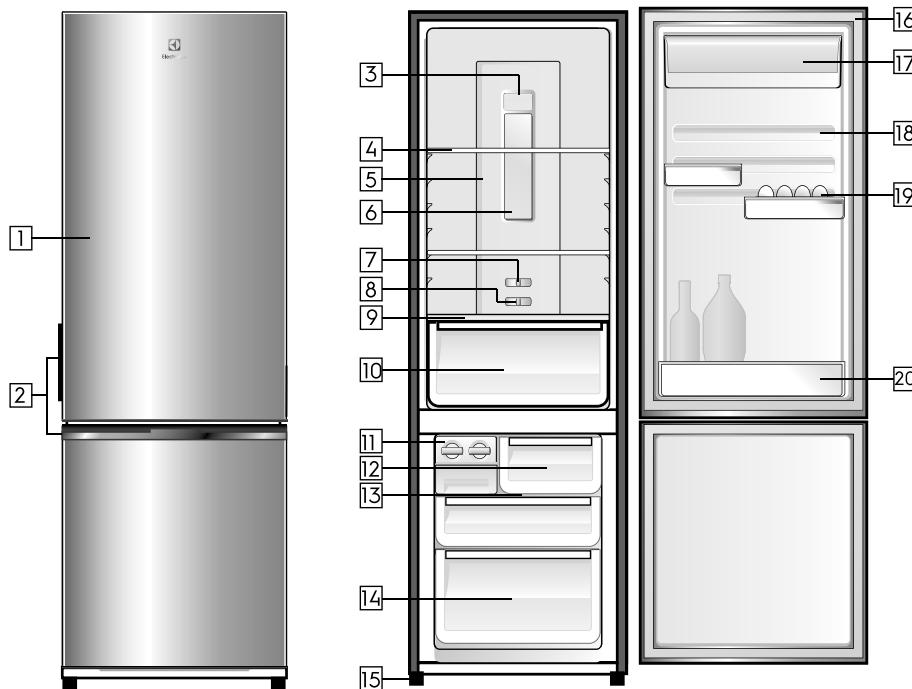

The details of the refrigerator feature:

1	Doors	11	Ice Twist & Serve
2	Door Handles	12	Meat Drawer
3	Deodoriser Cover	13	Freezer Shelf
4	Shelves	14	Crisper
5	Multi Flow	15	Feet
6	Refrigerator Light	16	Gaskets
7	Slide Control Refrigerator	17	FlexStor Bins
8	Slide Control Freezer	18	FlexStor Rails
9	Humidity Slide	19	Egg Tray
10	Crisper	20	Bottle Bins

MULTI TOP FREEZER FEATURES

- EME2800H-A
- EME2800H-H
- EME3700H-A
- EME3700H-H



The details of the refrigerator feature:

1	Doors	11	Deodoriser Cover refrigerator
2	Temperature Control Refrigerator	12	Shelves
3	Door handles	13	Humidity Slide
4	Freezer Shelf	14	Crisper
5	Ice Twist & Serve	15	Feet
6	Mid Door Shelf	16	Gaskets
7	Mid Door Bin	17	FlexStor Bins
8	Chill Room	18	Egg Tray
9	Multi Flow	19	FlexStor Rails
10	Refrigerator Light	20	Bottle Bins

FOOD STORAGE GUIDE

CATEGORY	PRODUCT	REFRIGERATOR	FREEZER	STORAGE TIPS
MEAT	Sausages and Mince	1-2 Days	2-3 Months	Keep cold meat at the back of the refrigerator where it is coldest.
	Chops and Steak	3-4 Days	4-6 Months	
	Cold Meats	3-5 Days	4-6 Months	Plastic can cause meat to sweat if stored in refrigerator for more than a day.
	Roasts	3-5 Days	12 Months	Roast can take up to 48 hours to defrost properly, transfer frozen roast to the refrigerator 2 days before use.
POULTRY	Chicken	1-2 Days	2 Months	If poultry takes on a smell or colour you are unsure about it is best to throw it out.
	Roast Chicken	3-5 Days	12 Months	
	Eggs	6 Weeks	Not Suitable	
SEAFOOD	Whole fish and fillets	2-3 Days	2 Months	Store in an airtight container or foil.
	Lobster and crabs	1-2 Days	2 Months	
	Prawns	1-2 Days	2 Months	
DAIRY	Milk	Until Expiry Date	Not Suitable	Never freeze prawns in salty water as this will dehydrate the flesh.
	Yoghurt	7- 10 Days	Not Suitable	
	Hard Cheeses	2 Weeks - 2 Months	2 Months (Grated)	
	Soft Cheeses	1-2 Weeks	Not Suitable	
	Butter	8 Weeks	12 Months	
FRUIT & VEGETABLES	Every fruit and vegetable has a different shelf life. Some stay fresh for a couple of days e.g. beans, others can last for a couple of months e.g. onions.		8-12 Months When freezing chop and blanch in small portions.	Keep vegetables in the crisper and away from the air vents to avoid freezing.
				Don't wash fruit and vegetables before storing them in the refrigerator as this can make them susceptible to rotting.
LEFT OVERS	Homemade meals	3-4 Days	2-6 Months	Store in sealed container. Freeze meals in small portion sizes to limit wastage.

IMPORTANT

Please note, use this information as a guide only, actual storage times will vary depending on how you use your refrigerator, climatic conditions and the freshness of the food.

TROUBLESHOOTING

If you find that something is wrong with your refrigerator, you can carry out some easy checks before calling for service. You may be able to fix the problem and save time and costs, and spare yourself from some inconvenience.

Problem	Solution
When your appliance is not operating	<ul style="list-style-type: none">Check that the power cord is plugged into the power outlet properly and that the outlet is switched on.Try running another appliance from the same power outlet. If no power is coming out from the outlet, you may have a blown fuse or tripped your household power supply circuit.Try adjusting the temperature control to a slightly colder position.It is normal for the freezer fan to NOT operate during the automatic defrost cycle or for a short time after the refrigerator is turned on.
When there is refrigerator noise	<ul style="list-style-type: none">Your refrigerator uses energy efficient components that may produce different noises from your old refrigerator.Occasionally, a gurgling sound of the refrigerant flowing or the sound of parts contracting or expanding may be heard.These sounds are quite normal. If the refrigerator is rattling or making vibrating noises, check that it is level and adjust levelling foot.
If there are odours inside the refrigerator	<ul style="list-style-type: none">The interior may need cleaningSome foods may produce strong odours and need to be tightly sealed.
If the temperature in the refrigerator is too warm	<ul style="list-style-type: none">Check that the refrigerator has enough clearance at the sides, back and top. Refer to the installation instructions in this manual.Refer to 'Temperature Control' section.The door may have been opened for too long or too frequently.Food containers or packaging may be holding the door
If the temperature in the refrigerator is too cold	<ul style="list-style-type: none">Refer to 'Temperature Control' section.Increase the temperature to avoid high energy consumption.


SERVICE REQUEST

If the problem persists after you have made the above mentioned checks, contact your nearest service centre or the dealer where you bought the refrigerator from. Be ready to quote the model number which is stated on the label found at the inner plastic compartment liner wall of the refrigerator.

Important notice

Before calling a service technician, please check carefully the operating instructions, service booklet and warranty terms and conditions.

Noise

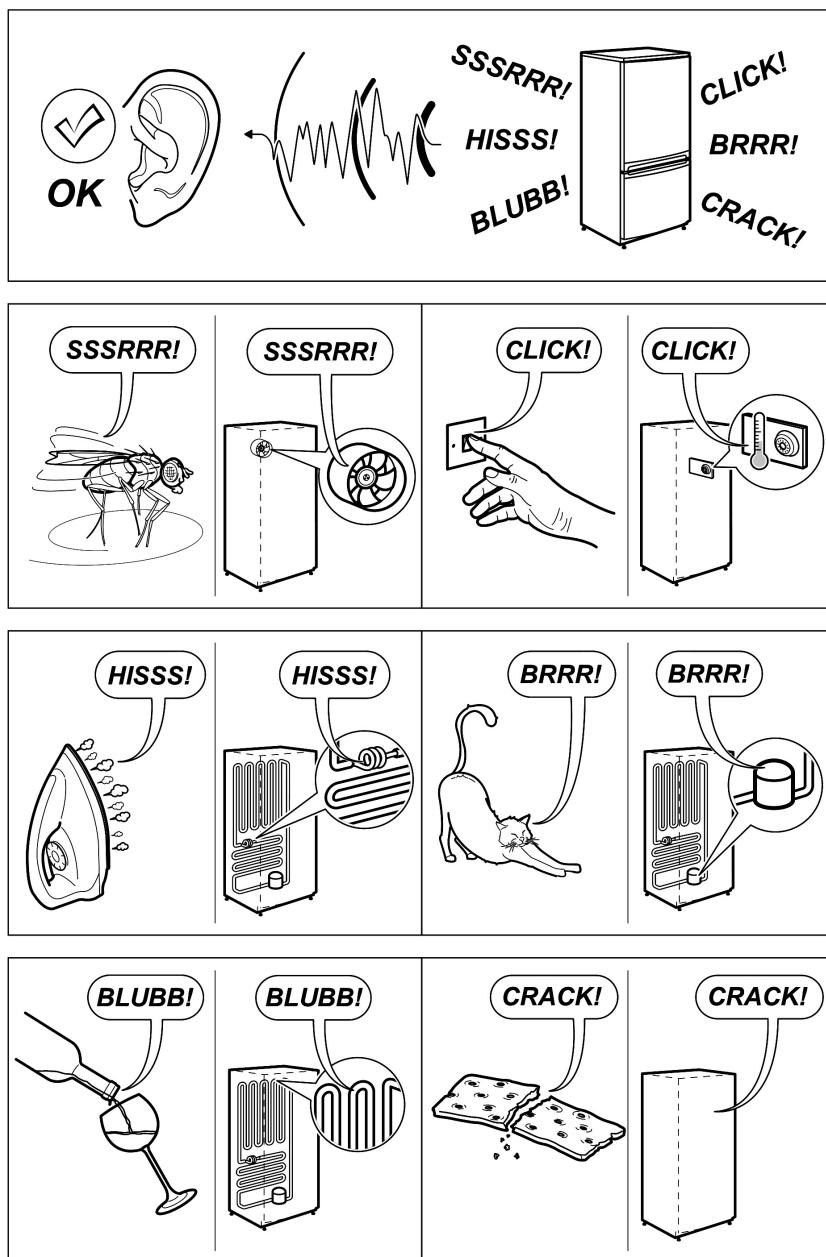

The thoughtful design innovator

Do you remember the last time you opened a gift and said to yourself 'That's exactly what I wanted!' That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge and a great deal of thought into anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but designed for the user. For us, thoughtful design means making appliances easier to use and performing tasks that are more enjoyable, and allowing our customers to experience the ultimate in luxury and ease of mind. Our aim is to make this ease of mind available to more people all over the world, in every part of their daily lives. So when we say that we're thinking of you, we mean exactly that.

Electrolux. Thinking of you

Share more of our thinking at
www.electrolux.com





DETAIL KONTAK LAYANAN PELANGGAN ELECTROLUX

Indonesia

CUSTOMER CARE CENTER:

Electrolux Building

Jl.Abdul Muis No.34, Petojo Selatan, Gambir
Jakarta Pusat 10160

Contact Center

0804 111 9999*

*Note : Rp. 450/mnt tarif flatseluruhindonesia

Email : customercare@electrolux.co.id

SMS & WA : 0812.8088.8863



Share more of our thinking at electrolux.com.

P/No: A12081616