




Instruction Book

FLOW **A4**



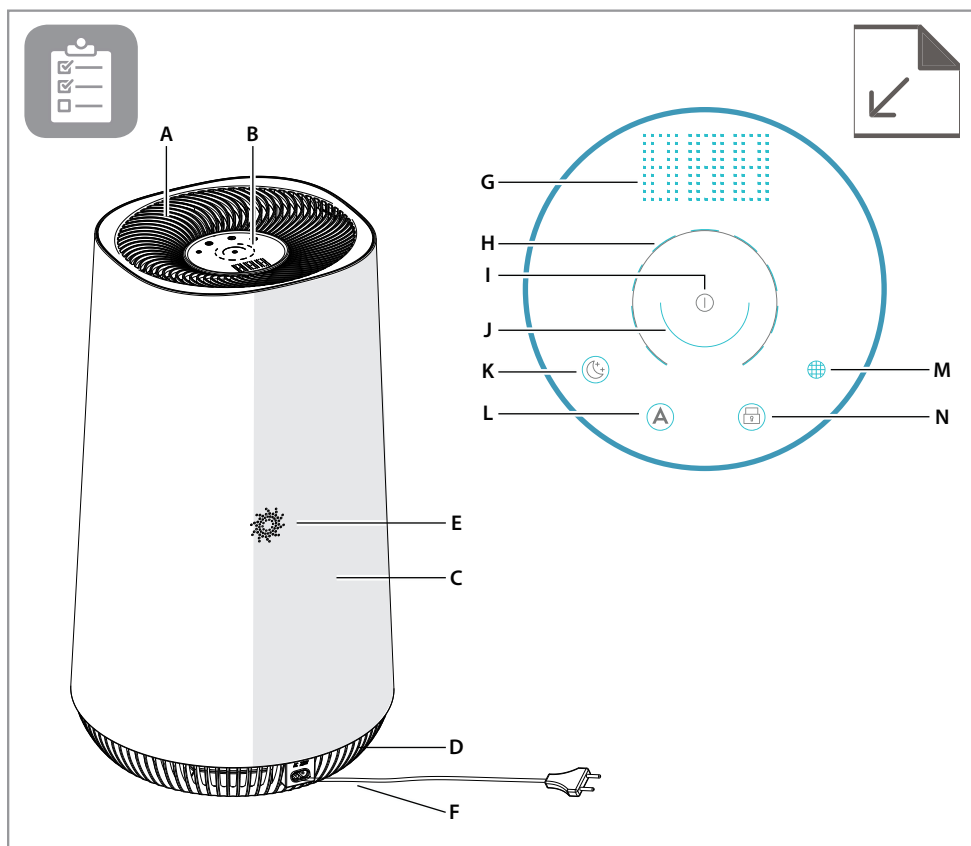












DESCRIPTION OF YOUR AIR PURIFIER FLOW A4

Appliance:

- A. Air outlet
- B. UI panel
- C. Main body
- D. Base
- E. Sensor window
- F. Power cord

Control panel:

- G. Air quality digital display
- H. Fan speed control
- I. Power on/off
- J. Air quality color indicator
- K. Sleep mode
- L. Auto mode
- M. Filter change reminder
- N. Child lock

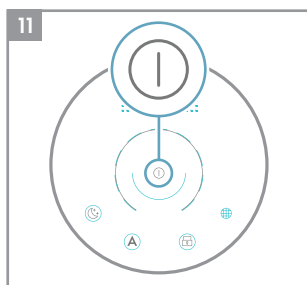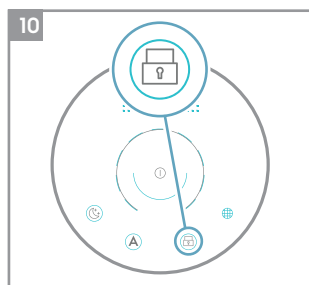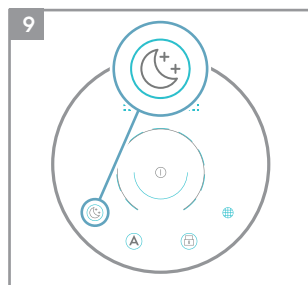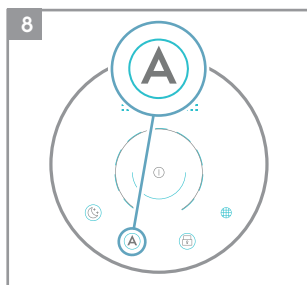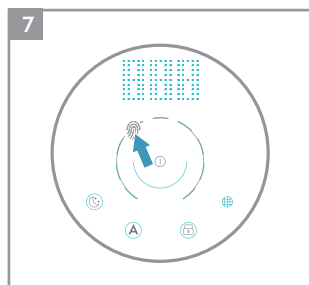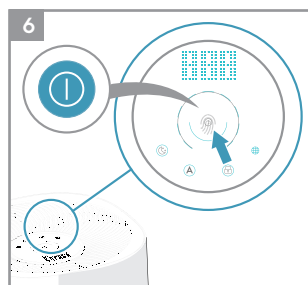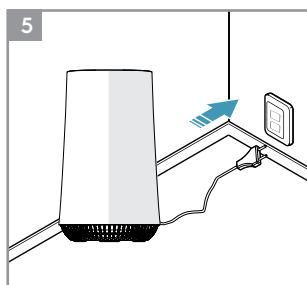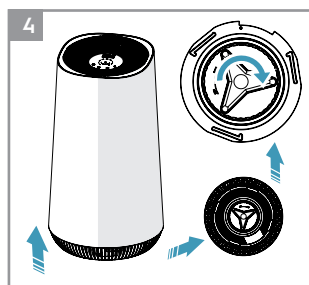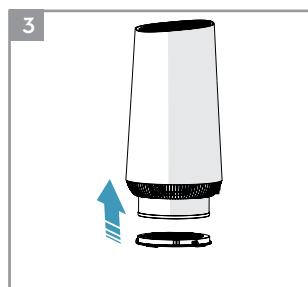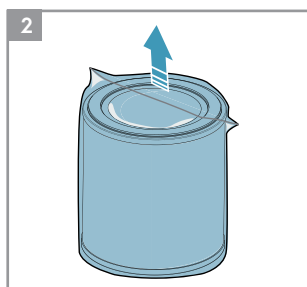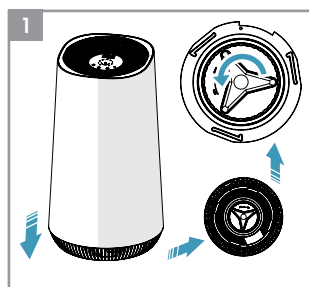

SAFETY INFORMATION

This USER MANUAL provides specific operating instructions for your model. Use the unit only as instructed in this USER MANUAL. These instructions are not meant to cover every possible condition and situation that may occur. Common sense and caution must be practiced when installing, operating, and maintaining any appliance.

WARNING! Avoid fire hazard or electric shock. Do not use an extension cord or an adaptor plug. Do not remove any prong from the power cord. This appliance can be used in 50Hz or 60Hz power supply without any change.

Do not under any circumstances, cut, remove or bypass the grounding prong.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for flammability and other warnings.

Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.

Do not touch the fan blade when removing the filter.

Children and Vulnerable People Safety

WARNING! Risk of suffocation, injury or permanent disability.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children under 3 years of age should be kept away from the appliance unless continuously supervised.

Keep all packaging away from children.

If the appliance has a child safety device, we recommend you activate it.

Electrical Information

WARNING! Avoid fire hazard or electric shock.

If you are not sure the outlet is adequately grounded or protected by a time delay fuse or circuit breaker, have a qualified electrician install the proper outlet according to the National Electrical Code and applicable local codes and ordinances.

Do not use an extension cord or an adapter plug.

Never unplug the unit by pulling on the power cord. Always grip the plug firmly and pull straight out from the receptacle.

Do not pinch, bend, or knot the power cord.

Do not cut or damage the power cord. If the power cord is damaged, it should only be replaced by an authorized Electrolux servicer. This unit contains no user-serviceable parts. Always call an authorized Electrolux servicer for repairs.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Be sure to unplug the unit before cleaning to prevent shock or fire hazards.

Safety Precautions

CAUTION! Avoid Serious Injury or Death.

Do not insert or place fingers or objects into the air discharge area or front grille of the unit.

Do not start or stop the unit by unplugging the power cord or turning off the power at the electrical box.

In the event of a malfunction (sparks, burning smell, etc.), immediately stop the operation, disconnect the power cord, and call an authorized Electrolux servicer. Do not operate the unit with wet hands.

Do not pull on the power cord.

CAUTION! Avoid Injury or damage to the unit or other property.

Do not direct airflow at fireplaces or other heat related sources as this could cause flare ups.

Do not climb on or place objects on the unit.

Do not hang objects off the unit.

Do not place containers with liquids on the unit.

Turn off the unit at the power source when it will not be used for an extended period of time.

Operate the unit with air filter in place.

Do not block or cover the intake grille, discharge area and outlet ports.

Ensure that any electrical/electronic equipment is 30 cm away from the unit.

DISPOSAL



This symbol on the product indicates that this product contains a battery which shall not be disposed with normal household waste..



This symbol on the product or on its packaging indicates that the product may not be treated as household waste.

To recycle your product, please take it to an official collection point or to an Electrolux service center that can remove and recycle the battery and electric parts in a safe and professional way. Follow your country's rules for the separate collection of electrical products and rechargeable batteries.

Thank you for choosing the Electrolux air purifier FLOW A4.

Always use original accessories and spare parts to get the best results. This product is designed with the environment in mind. All plastic parts are marked for recycling purposes.

BEFORE STARTING

- Read this manual carefully.
- Check that all parts described are included.
- Pay special attention to the safety precautions!

SET UP

The filters have to be installed before use.

Caution: Switch off the device before installing filters.

1 Open the base of the filter

Open the product by rotating the base in anticlockwise direction with the handle provided at the bottom till it comes loose (ref. picture 1).

2 Take out the filter and remove the filter bag

Carefully remove the filter incl. plastic packaging from the unit and break open the plastic bag and discard appropriately (ref. picture 2).

3 Install the filter

Carefully insert the filter back into the product without the plastic packaging (either end of the filter works). Take care that the filter is placed in the center of the cavity (ref. picture 3).

4 Close the base

Close the product by rotating the base in clockwise direction with the handle provided at the bottom till it is securely in place. There two opposing triangular marks on the base of the product to identify the leading edge for turning (ref. picture 4).

OPERATION

Caution: After filter is installed correctly, please ensure product is placed on a level surface before proceeding further. Ensure there is enough free space on top of and around the product.

5 Connect the power plug.

6 Power on

Power on the product by gently touching the ON/OFF icon on the center of the product (ref. picture 6).

7 Fan speed control

Change the fan speed by gently touching desired fan speed icon on the product. You can also slide your finger across the arc to change fan speed (ref. picture 7).

8 Auto mode

Change to AUTO mode by gently touching icon labeled A. You can bring product out of AUTO mode by pressing any other icon except change filter (ref. picture 8).

9 Sleep mode

Change to SLEEP mode by gently touching icon labeled with a moon. You can bring product out of SLEEP mode by pressing any other icon except change filter (ref. picture 9).

While in SLEEP mode, the UI including the AQI light will be turned off after X seconds.

10 Child lock

To enable CHILD LOCK long press icon labeled with a lock for 5 seconds. When in this mode, no other icon will register input (ref. picture 10).

To disable CHILD LOCK, long press icon labeled with a lock again for 5 seconds till the lock LED turns off.

11 Power off

Power down the product by gently touching the ON/OFF icon on the center of the product (ref. picture 11).

AIR QUALITY INDICATOR

12 The appliance has an air quality sensor that analyzes the air quality.

The air quality light will show the real-time air quality through different colors of light. As shown below:

LIGHT'S COLOR	PM 2.5 (µg/m ³)	AIR QUALITY
Blue	0-15	Very Good
Green	16-35	Good
Orange	36-75	Bad
Red	>75	Very Bad

FILTER CHANGE INDICATOR

13 The filter change indicator will light up to remind you to change the filter (Ref. # EFFCLN4).

- When filter change indicator flicker with red light, please replace the filter and reset the filter change indicator.
- When filter change indicator stop flicker and the red light fix, please replace the filter immediately and reset the filter change indicator.

14 Filter change indicator reset operation

Press the filter change button "🌐" for 3s and filter change indicator will reset, then red light will go off.

CARE AND CLEANING

15 Unplug the appliance before cleaning to prevent shock or fire hazards. Use a damp cloth or a vacuum cleaner with soft brush to clean your air purifier.

16 The plastic part of the cabinet and top may be cleaned with an oil-free cloth or washed with a cloth dampened in a solution of warm water and mild liquid dishwashing detergent. Be sure to wring excess water from the cloth before wiping around the controls. Excess water in or around the controls may cause damage to the appliance.

17 Never use harsh cleaners, wax or polish when cleaning the unit.

STORAGE

18 If you are not planning to use the appliance for a long time, cover it with plastic or return it to its carton.

NOTE: The multi-layer filter can not be washed, it can only be replaced.

CAUTION!

Do not touch the fan blade when removing the multi-layer filter.

ERROR CODE

19 Fan failure error code, when digital display area shows E1, it means the fan failure occurs. Motor will stop working.

20 Air quality sensor failure error code, when digital display area shows E2 after unit running 10min later, unit will keep running, it means the Air quality sensor failure occurs.

TROUBLESHOOTING

When fault indicators show that the system is not operating properly, perform the following check.

Commonly Asked Questions & Topics

Carry out the operations below for commonly-occurring questions or faults.

Questions or Faults	Possible Diagnosis	Corrective Steps / Reasoning
Can the filters be washed?	NO	Replace the compound filter instead of wash, the pre-filter can be wiped.
The control panel does not seem to work.	Power issue or the filter compartment if unlocked.	Check if the equipment is powered on and confirm whether the filter compartment door is locked.
The equipment emits a lot of noise.	The installation location is not at even level or the filter is not properly inserted.	Install the equipment on a level surface and re-confirm filter installation position and order.
The equipment operates normally but the outgoing air volume is significantly reduced.	The outlet might be blocked by a foreign object or the filter has not been replaced in a timely manner.	Please re-adjust the equipment installation position to ensure enough space is reserved, and confirm that filter have been replaced according to filter replacement indicator status.
If the fault encountered is not listed above, please call the Customer Service Hotline.		

CONSUMER CARE

Indonesia

Electrolux Indonesia
Electrolux Building
JL. Abdul Muis 34, Petojo Selatan Gambir,
Jakarta 10160, Indonesia
Tel: +(62) 21 5081 7300
Fax: +(62) 21 5081 7399
Customer Care Service: +(62) 0804 111 999
Email: customercare@electrolux.co.id
Website: www.electrolux.co.id
SMS: 0812 8088 8863

Malaysia

Head Office: Electrolux Home Appliances Sdn. Bhd.,
Unit T2-7, 7th Floor, Tower 2, Jaya 33 Hyperoffice, No. 3, Jalan
Semangat, Seksyen 13, 46100 Petaling Jaya, Selangor
Consumer Care Center
Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam
Seksyen 15, 40200 Shah Alam, Selangor
Customer care hotline: 1300-88-1122
Customer Care Services Tel: +(60 3) 5525 0800
Customer Care Services Fax: +(60 3) 5524 2521
Email: malaysia.customercare@electrolux.com
Website: www.electrolux.com.my

Singapore

Electrolux S.E.A. Pte Ltd
1 Fusionopolis Place, Galaxis #07-10 (West Lobby),
Singapore 138522
Customer Care Hotline: +(65) 6727 3699
Fax: +(65) 6727 3611
Email: customer-care.sin@electrolux.com
Website: www.electrolux.com.sg

Thailand

Electrolux Thailand Co. Ltd.
Electrolux Building, 14th Floor 1910 New Petchburi Road
Bangkapi, Huay Kwang, Bangkok 10310 Thailand
Tel: +(66) 2 725 9100
Fax: +(66) 2 725 9299
Customer Care Services: +(66) 2 725 9000
Email: customercarethai@electrolux.com
Website: www.electrolux.co.th

Vietnam

Electrolux Vietnam Ltd.
Floor 9th, A&B Tower, 76 Le Lai street - Ben Thanh Ward -
District 1 Ho Chi Minh City, Vietnam
Customer Care Services: 1800-58-8899
Tel: +(84) 8 3910 5465
Fax: +(84) 8 3910 5470
Email: vnccare@electrolux.com
Website: www.electrolux.vn

Philippines

Electrolux Philippines Inc.,
12th Floor, Cyber Sigma Building, Lawton Avenue,
McKinley West, Taguig City, Philippines 1634
Domestic Toll Free : 1-800 10 845-care 2273
Customer Care Hotlines :
- Domestic Toll Free PLDT No: 1 800 10 845-CARE (2273)
- Manila Hotline No: +(63) 02 845-CARE (2273)
- SMART Mobile No: +(63) 998 582 9970
- Globe Mobile No: +(63) 917 629 7198
Fax: +(63) 2 478 8401
Email: wecare@electrolux.com
Facebook: www.facebook.com/ElectroluxPhilippines/

Korea

일렉트로룩스 코리아(주)
서울특별시 중구 을지로100
파인에비뉴빌딩 B동 9층 (우: 04551)
고객센터 : 1566-1238
팩스 : 02-6020-2272~3
이메일: homecare.krh@electrolux.com
웹사이트: www.electrolux.co.kr
액세서리구매: www.electroluxshop.co.kr

Japan

エレクトロラックス・ジャパン株式会社
〒105-0011 東京都港区芝公園2-4-1 芝パークビル A館 6F
お客様サポート フリーダイヤル : 0120-54-0202
ウェブサイトト : <http://www.electrolux.co.jp/>
公式オンラインショップ : <http://shop.electrolux.co.jp/>

Taiwan (ENG)

Electrolux S.E.A. Private Limited Taiwan Branch
9F., No.68, Sec. 2, Xianmin Blvd., Banqiao Dist.,
New Taipei City 22065, Taiwan (R.O.C.)
Customer Care Hotline: 0800-888-259
Email: service@electrolux.com.tw

Taiwan (CHN)

新加坡商伊萊克斯股份有限公司 台灣分公司
地址 : 22065新北市板橋區縣民大道2段68號9F
客服電話 : 0800-888-259
電子郵件 : service@electrolux.com.tw

New Zealand

Electrolux Home Care & Small Domestic Appliances
A division of Electrolux (NZ) Limited
3-5 Niall Burgess Road, Mt Wellington, Auckland, New Zealand
Phone: (09) 573 2220
Customer Service Phone: 0808 730 730
website: www.electrolux.com
webshop: www.electroluxvacuums.co.nz/parts-and-service/all-parts

Australia


Electrolux Home Care & Small Domestic Appliances
ABN 51 004 762 341
163 O'Riordan Street, Mascot, NSW 2020, Australia
Customer Service Phone: 1300 365 305
Website: www.electrolux.com
Webshop: shop.electrolux.com.au



คู่มือการใช้งาน

FLOW **A4**
(FA41-402GY)



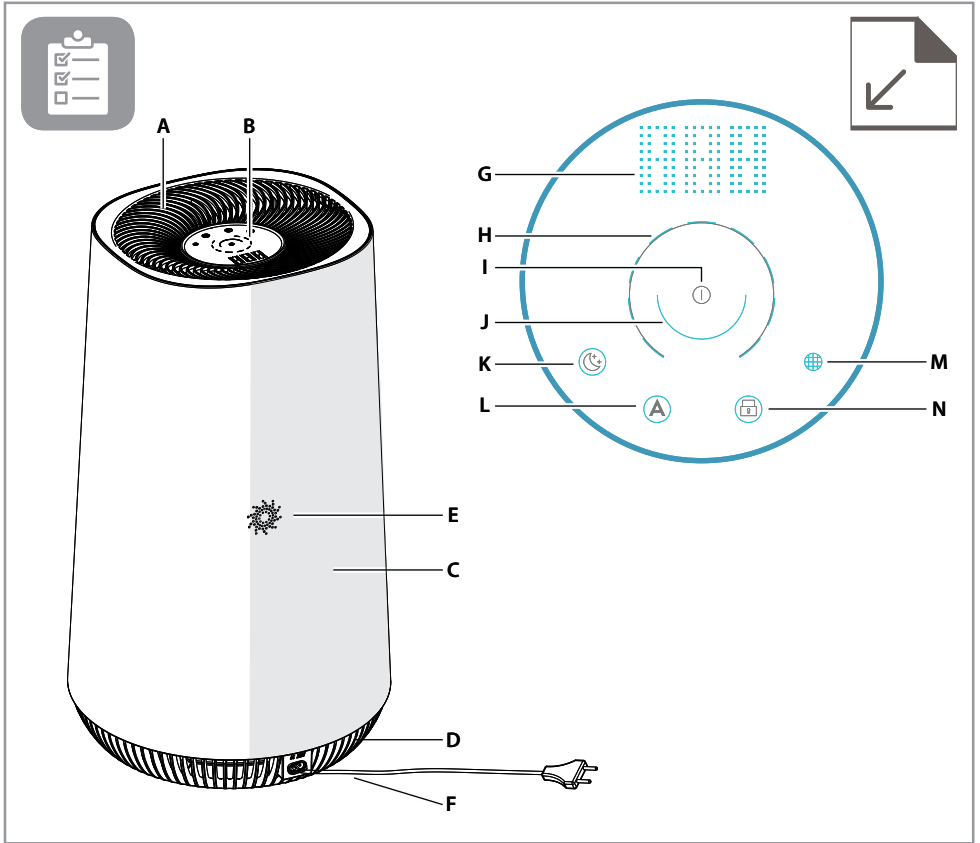












รายละเอียดส่วนประกอบ เครื่องฟอกอากาศ FLOW A4

ตัวเครื่อง :

- A ช่องอากาศออก
- B จอแสดงผล
- C ตัวเครื่อง
- D ฐานเครื่อง
- E ช่องเซ็นเซอร์
- F สายไฟ

แผงควบคุม :

- G จอดิจิทัลแสดงคุณภาพอากาศ
- H ควบคุมความเร็วพัดลม
- I ปุ่มเปิด / ปิด
- J ไฟแสดงคุณภาพอากาศ
- K โหมด Sleep
- L โหมด Auto
- M เซียนการเปลี่ยนเฟนกรอง
- N ล็อคป้องกันเด็ก

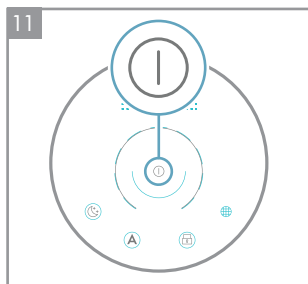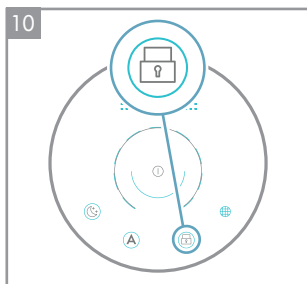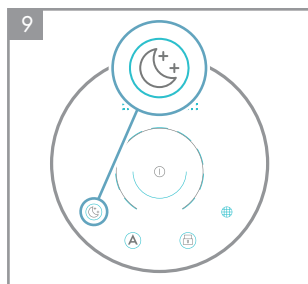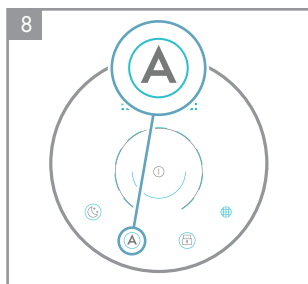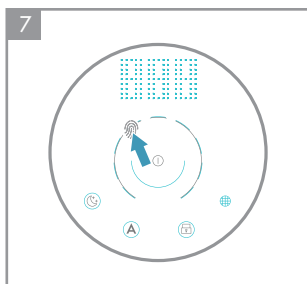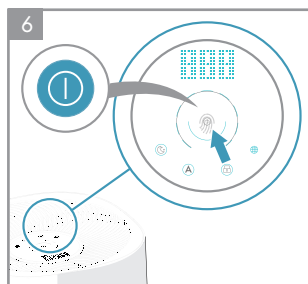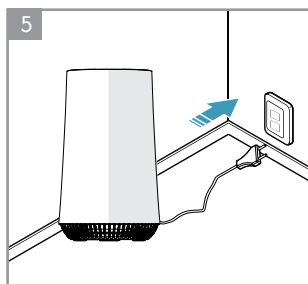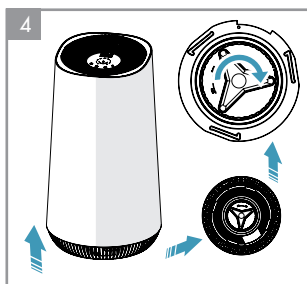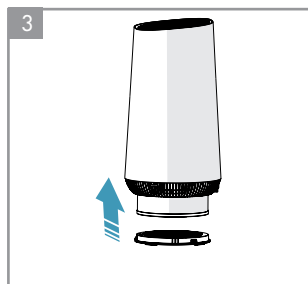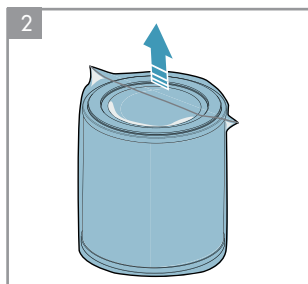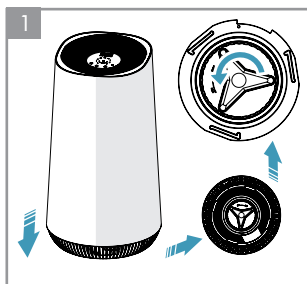

ข้อมูลด้านความปลอดภัย

คู่มือการใช้งานฉบับนี้มีการระบุรายละเอียดในการใช้งานสำหรับรุ่นของท่าน โปรดใช้งานให้ตรงกับข้อมูลที่ระบุไว้ในคู่มือ โดยคู่มือฉบับนี้อาจไม่ได้ให้ข้อมูลของเงื่อนไขที่เป็นไปได้หรือสถานการณ์ที่อาจเกิดขึ้นไว้ทั้งหมด จึงจำเป็นต้องใช้วิจารณญาณในการติดตั้ง ใช้งาน และดูแลรักษาเครื่องใช้ไฟฟ้าร่วมด้วย

คำเตือน! โปรดหลีกเลี่ยงและระวังไฟไหม้หรือไฟฟ้าลัดวงจร ไม่ควรใช้สายต่อพ่วงไฟฟ้าหรือหัวแปลงปลั๊กไฟ หรือนำส่วนประกอบของสายไฟออก เครื่องใช้ไฟฟ้านี้สามารถใช้ได้กับกำลังไฟ 50Hz หรือ 60Hz และไม่สามารถเปลี่ยนแปลงได้

ห้ามตัด นำออก ตัดต่อสายดินหรือส่วนที่เกี่ยวของของเครื่อง

ห้ามเก็บหรือใช้น้ำมัน หรือวัตถุไวไฟทั้งแบบระเหยและของเหลวบริเวณใกล้เคียงเครื่องใช้ไฟฟ้า อ่านฉลากคำเตือนเกี่ยวกับการติดไฟและคำเตือนอื่นๆ

ห้ามให้น้ำหรือของเหลวหรือวัตถุไวไฟอื่นๆ เข้าในเครื่องใช้ไฟฟ้า เพื่อป้องกันไฟฟ้าลัดวงจรและเกิดการติดไฟ

ห้ามสัมผัสกับใบพัดของพัดลมขณะนำแผ่นกรองออก

โปรดระมัดระวังเมื่อมีเด็ก และผู้มีความเสี่ยง

คำเตือน! เสี่ยงต่อการบาดเจ็บทางกายใจ ได้รับบาดเจ็บ หรืออุบัติเหตุทาง

เด็กที่มีอายุ 8 ปีขึ้นไป และบุคคลที่มีสมรรถภาพทางกายภาพ ทางประสาทสัมผัส หรือความสามารถทางจิตใจไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ สามารถใช้ผลิตภัณฑ์นี้ได้หากได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้นี้อย่างปลอดภัยและเข้าใจถึงอันตรายที่อาจเกิดขึ้น ห้ามให้เด็กเล่นกับเครื่องใช้นี้

ห้ามให้เด็กทำความสะอาดและบำรุงรักษาเครื่องโดยไม่ได้รับการดูแล

เด็กที่มีอายุต่ำกว่า 3 ปีควรอยู่ห่าง เว้นแต่จะได้รับการดูแลตลอดเวลา

เก็บบรรจุภัณฑ์ทั้งหมดให้พ้นมือเด็ก

หากผลิตภัณฑ์นี้มีอุปกรณ์เพื่อความปลอดภัยสำหรับเด็ก เราแนะนำให้ปิดใช้งาน

ข้อมูลเกี่ยวกับการใช้ไฟฟ้า

คำเตือน! โปรดหลีกเลี่ยงการละระวังไฟไหม้หรือไฟฟ้าลัดวงจร หากคุณไม่แน่ใจว่าปลั๊กจ่ายไฟฟ้ามีการต่อสายดินหรือไม่ หรือมีฟิวส์ป้องกันไฟฟ้าลัดวงจร หรือมีเบรกเกอร์ โปรดติดต่อช่างไฟฟ้าในการติดตั้งปลั๊กจ่ายไฟฟ้าที่มาตรฐาน สอดคล้องกับมาตรฐานด้านความปลอดภัยเกี่ยวกับไฟฟ้าของแต่ละประเทศ ไม่ควรใช้สายต่อพ่วงไฟฟ้าหรือหัวแปลงปลั๊กไฟ ห้ามถอดปลั๊กโดยการดึงสายไฟ ให้จับที่หัวปลั๊กไฟแทนๆ และดึงตรงๆ เพื่อถอดออกจากเต้าจ่ายไฟฟ้า ห้ามเจาะ เจอ หรือทำสายไฟให้เป็นปบบ ห้ามตัดหรือทำให้สายไฟเสียหาย หากสายไฟชำรุดต้องเปลี่ยน โดยผู้เชี่ยวชาญของอิเล็กทรอนิกส์ เครื่องใช้ไฟฟ้าชิ้นนี้ไม่มีอะไหล่ที่ผู้ใช้งานสามารถเปลี่ยนได้เอง ต้องเรียกช่างจากอิเล็กทรอนิกส์ในการซ่อมเสมอ ถ้าสายไฟเกิดความเสียหาย โปรดให้ผู้ผลิต ตัวแทนฝ่ายบริการ หรือบุคคลที่มีความชำนาญเป็นผู้อุปถัมภ์เปลี่ยนสายไฟเพื่อหลีกเลี่ยงอันตรายจากไฟฟ้า ถอดปลั๊กเครื่องออกก่อนทำความสะอาดเสมอเพื่อป้องกันไฟฟ้าลัดวงจร หรือไฟไหม้

ข้อมูลด้านความปลอดภัย

โปรดระวัง! เพื่อหลีกเลี่ยงการบาดเจ็บหรือเสียชีวิต ห้ามสอดนิ้วหรือสิ่งอื่นๆ เข้าในช่องปล่อยอากาศหรือตะแกรงด้านหน้าเครื่อง ห้ามเปิดและปิดเครื่องด้วยการดึงปลั๊ก หรือปิดสวิตช์จ่ายไฟ หากเกิดการทำงานผิดพลาด (ไฟไหม้, มีกลิ่นไหม้ หรืออื่นๆ) หยุดการทำงานทันที ดึงปลั๊กออก และเรียกช่างบริการของอิเล็กทรอนิกส์ ห้ามใช้งานเครื่องบนเบาะนอนเตียง ห้ามดึงสายไฟ **คำเตือน!** หลีกเลี่ยงการทำให้เครื่องชำรุดหรือเสียหายกับตัวเครื่องและส่วนประกอบ ห้ามวางใกล้กับเปลวไฟ หรือจุดทำความร้อน เพราะอาจทำให้ติดไฟได้ ห้ามปีนหรือวางสิ่งของบนตัวเครื่อง ห้ามแขวนสิ่งของบนตัวเครื่อง ห้ามวางของเหลวบนตัวเครื่อง หากไม่ต้องการใช้เครื่องเป็นเวลานานให้ถอดปลั๊ก หรือปิดสวิตช์จ่ายไฟเข้าเครื่อง ติดตั้งเฟ้นกรองทุกครั้งเมื่อใช้งาน ห้ามวางสิ่งของปิด หรือกีดขวางช่องลม, ช่องปล่อยอากาศ และช่องดูดอากาศ วางตัวเครื่องให้ห่างจากเครื่องใช้ไฟฟ้าอื่นๆ อย่างน้อย 30 ซม.

การกำจัด



เครื่องหมายนี้บนผลิตภัณฑ์แสดงถึงการมีแบตเตอรี่ ติดตั้งอยู่ในเครื่อง และไม่สามารถทิ้งในขยะตามปกติได้



เครื่องหมายนี้บนบรรจุภัณฑ์ หมายความว่า ไม่สามารถทิ้งในขยะตามปกติได้

ในการรีไซเคิลผลิตภัณฑ์ กรุณานำตัวเครื่องไปยังจุดรับรีไซเคิล หรือนำไปยังศูนย์บริการอิเล็กทรอนิกส์ซึ่งจะสามารถถอดและรีไซเคิลแบตเตอรี่ หรือชิ้นส่วนอิเล็กทรอนิกส์ได้อย่างปลอดภัย สอดคล้องกับกฎระเบียบในการจัดการ แยกชิ้นส่วนผลิตภัณฑ์อิเล็กทรอนิกส์ และแบตเตอรี่ใหม่ในแต่ละประเทศ

ขอบคุณที่เลือกใช้งานเครื่องฟอกอากาศอิเล็กทรอนิกส์ FLOW A4

โปรดใช้วิธีเหล่านี้เพื่อปกป้องเสริมของตัวเครื่อง เพื่อประสิทธิภาพสูงสุดในการทำงาน ผลิตภัณฑ์นี้ได้รับการออกแบบโดยคำนึงถึงสิ่งแวดล้อม ชิ้นส่วนพลาสติกทั้งหมดสามารถนำใบรีไซเคิลได้

ก่อนเริ่มต้นใช้งาน

อ่านคู่มือการใช้งานโดยละเอียด ตรวจสอบส่วนประกอบที่แจ้งไว้ว่าครบถ้วน คำนึงถึงความปลอดภัยอยู่เสมอ

การติดตั้ง

ติดตั้งตัวเฟ้นกรองก่อนการใช้งาน
โปรดระวัง : ปิดเครื่องก่อนติดตั้งเฟ้นกรองอากาศ

1 เปิดที่ฐานของตัวเครื่อง

หมุนที่ฐานของเครื่องทวนเข็มนาฬิกา ให้ฐานเริ่มคลายออก (ภาพประกอบ 1)

2 นำเฟ้นกรองออกมา เปิดถุงพลาสติก

นำเฟ้นกรองออกมาจากเครื่องอย่างระมัดระวัง และนำถุงพลาสติกที่หุ้มอยู่ออก นำถุงไปทิ้งอย่างเหมาะสม (ภาพประกอบ 2)

3 ติดตั้งเฟ้นกรอง

ติดตั้งเฟ้นกรองที่นำถุงพลาสติกออกแล้วเข้าในเครื่องอย่างระมัดระวัง (เฟ้นกรองใช้งานได้ทั้งสองด้าน) ตรวจสอบให้เฟ้นกรองอยู่ตำแหน่งกลางของช่อง (ภาพประกอบ 3)

4 ปิดฝาฐานเครื่อง

ประกอบฐานเครื่องเข้าที่เดิมโดยหมุนตามเข็มนาฬิกา จนเข้าที่โดยมีรอยจับที่อยู่ฐานเครื่องจนเข้าที่ โดยมีรูปลานเหลี่ยมซี่ไปซี่ 2 ด้านเพื่อแนบทิศทางการหมุน (ภาพประกอบ 4)

การใช้งาน

โปรดระวัง : ตรวจสอบว่าเฟ้นกรองอยู่ในตำแหน่งที่ถูกต้อง ตัวเครื่องตั้งบนพื้นราบที่มีพื้นที่รองรับเครื่อง ทั้งด้านข้างและด้านบนเครื่อง

5 เสียบปลั๊ก

6 เปิดเครื่อง

เปิดเครื่องโดยกดปุ่ม ON/OFF ที่อยู่ตรงกลางเครื่องเบาๆ (ภาพประกอบ 6)

7 ควบคุมความเร็วพัดลม

ปรับความเร็วพัดลมโดยสัมผัสที่ไอคอนรูปใบพัดที่ตัวเครื่อง
และเลื่อนนิ้วมือเพื่อเลือกระดับความเร็วพัดลมที่ต้องการ
(ภาพประกอบ 7)

8 โหมด AUTO

ใช้โหมด AUTO โดยสัมผัสที่ A และยกเลิกการใช้โหมด
AUTO โดยการสัมผัสไอคอนอื่นๆ ยกเว้นไอคอนเปลี่ยน
โหมด (ภาพประกอบ 8)

9 โหมด SLEEP

ใช้โหมด SLEEP โดยสัมผัสไอคอนรูปพระจันทร์ และ
ยกเลิกการใช้โหมด SLEEP โดยการสัมผัสไอคอนอื่นๆ
ยกเว้นไอคอนเปลี่ยนโหมด (ภาพประกอบ 9)
ขณะใช้โหมด SLEEP หน้าจอทั้งหมดรวมถึงไฟแสดง
AQI จะดับลง หลังจาก X วินาที

10 ล็อคป้องกันเด็ก

ใช้โหมดล็อคป้องกันเด็ก โดยสัมผัสไอคอนรูปแม่กุญแจ
5 วินาที เมื่อโหมดนี้เปิดทำงานจะไม่สามารถสั่งงานโหมด
อื่นได้ (ภาพประกอบ 10)
ยกเลิกการใช้โหมดล็อคป้องกันเด็ก ได้ด้วยการสัมผัส
ไอคอนแม่กุญแจค้างไว้ 5 วินาทีอีกครั้ง จนไฟ LED
ของไอคอนดับไป

11 ปิดการทำงาน

ปิดการทำงานของเครื่องโดยสัมผัสปุ่ม ON/OFF ที่อยู่
ตรงกลางเครื่องใดๆ (ภาพประกอบ 11)

12 แสดงคุณภาพอากาศ

ตัวเครื่องติดตั้งเซ็นเซอร์เพื่อตรวจวัดคุณภาพของอากาศ
ไฟแสดงคุณภาพอากาศจะแสดงสถานะคุณภาพอากาศ
ณ ปัจจุบันด้วยสีของไฟที่แตกต่างกันไปดังต่อไปนี้

ฟ้า	0-15	ดีมาก
เขียว	16-35	ดี
ส้ม	36-75	แย่มาก
แดง	>75	แย่มาก

แสดงสถานะไฟแสดง

13 ไฟแสดงสถานะไฟแสดงจะสว่างขึ้นเพื่อเตือนให้เปลี่ยน ไฟแสดงสถานะไฟแสดง #EFFCLN4

เมื่อไฟแสดงสถานะไฟแสดงเป็นสีแดงแสดงว่าให้เปลี่ยน
ไฟแสดงและใช้กระบวนการเปลี่ยนไฟแสดง
เมื่อไฟแสดงสถานะไฟแสดงเป็นสีแดงค้าง ให้เปลี่ยนไฟ
แสดงโดยทันทีและใช้กระบวนการเปลี่ยนไฟแสดง

14 รีเซ็ตระบบสถานะการเปลี่ยนไฟแสดง

กดปุ่มเปลี่ยนไฟแสดง 🌐 3 วินาทีและระบบสถานะ
การเปลี่ยนไฟแสดงจะถูกตั้งค่าใหม่ (รีเซ็ต) และจะไม่แสดง
ไฟสีแดง

การดูแลและทำความสะอาด

15 ถอดปลั๊กไฟออกก่อนการทำความสะอาดเพื่อป้องกันไฟฟ้า
ลัดวงจรหรือไฟไหม้ ใช้ผ้าชุบน้ำหมาดๆ หรือใช้เครื่องดูด
ฝุ่นพร้อมหัวแปรงขนนุ่มทำความสะอาดเครื่องฟอกอากาศ

16 ส่วนที่เป็นพลาสติกและด้านบนของเครื่องสามารถทำความสะอาด
ได้ด้วยผ้าที่ไม่มีน้ำมัน หรือผ้าชุบน้ำอุ่นและน้ำยา
ล้างจานสูตรอ่อน มีดฟ้าให้ขนาดและระวังน้ำหยดเข้าเครื่อง
หากน้ำเข้าไปในส่วนของคอมูนอาจส่งผลให้เครื่องชำรุดได้

17 ห้ามใช้สารทำความสะอาดเข้มข้น ขัดเงา หรือเคลือบเงา
ในการทำทำความสะอาดเครื่อง

การเก็บรักษา

18 หากไม่ต้องการใช้เครื่องฟอกอากาศเป็นเวลานาน
ใช้พลาสติกคลุมตัวเครื่อง หรือนำใส่กล่องบรรจุภัณฑ์
ของเครื่อง

หมายเหตุ : ฝุ่นกรองหลายชั้นไม่สามารถล้างทำความสะอาด
ได้ ต้องเปลี่ยนใหม่เท่านั้น

โปรดระวัง : ห้ามสัมผัสไฟในตัวในขณะนำฝุ่นกรอง
หลายชั้นออกจากเครื่อง

รหัสข้อผิดพลาด

19 เมื่อหน้าจอแสดงรหัส E1 แสดงถึงพัดลมมีปัญหา
มอเตอร์หรือหยุดการทำงาน

20 เมื่อหน้าจอแสดงรหัส E2 หลังจากเปิดเครื่อง 10 นาที
แสดงถึงเซ็นเซอร์คุณภาพอากาศมีปัญหา เครื่องจะทำงาน
ต่อไปได้แต่ไม่สามารถวัดค่า PM ได้

การแก้ไขปัญหาเบื้องต้น

เมื่อระบบแสดงสถานะการทำงานแจ้งว่าเครื่องทำงานไม่สมบูรณ์ กรุณาตรวจสอบ

คำถามและประเด็นที่ถูกต้องบ่อยครั้ง

ทดลองแก้ไขการทำงานตามคำถามและประเด็นที่เกิดขึ้นบ่อยครั้ง

คำถาม หรือข้อผิดพลาด	สาเหตุที่อาจเป็นไปได้	วิธีการแก้ไข/สาเหตุ
แผ่นกรองสามารถล้างได้หรือไม่	ไม่	แผ่นกรองต้องเปลี่ยนใหม่เท่านั้น แต่แผ่นกรอง pre-filter สามารถเปิด ทำความสะอาดได้
แผงควบคุมไม่ทำงาน	ปัญหาเกี่ยวกับกำลังไฟ หรือช่องบรรจุ แผ่นกรองไม่ลงล็อก	ตรวจสอบปลั๊กเสถียรไฟ และตรวจสอบ ช่องบรรจุแผ่นกรองว่าอยู่ในตำแหน่งล็อก หรือไม่
เครื่องมีเสียงดังขณะทำงาน	เครื่องไม่ได้วางบนพื้นราบ หรือ แผ่นกรองติดตั้งไม่ตรงตำแหน่ง	วางเครื่องบนพื้นราบ และใส่แผ่นกรอง ในตำแหน่งที่ถูกต้องอีกครั้ง
เครื่องทำงานปกติ แต่ปริมาณอากาศ ที่ออกจากเครื่องลดลง	ช่องปล่อยอากาศถูกปิดโดยสิ่ง แปลกปลอม หรือไม่ได้เปลี่ยนแผ่นกรอง เป็นเวลานาน	ประกอบชิ้นส่วนของเครื่องใหม่อีกครั้ง ตรวจสอบว่าอุปกรณ์ต่างๆ อยู่ในตำแหน่ง ที่ถูกต้อง และตรวจสอบระยะเวลาการใช้งาน แผ่นกรองให้สอดคล้องกับตัวแสดงสถานะ: แผ่นกรอง
หากปัญหาที่พบไม่แสดงในรายการด้านบน กรุณาติดต่อแผนกบริการลูกค้า		

www.electrolux.com/shop



ศูนย์บริการลูกค้าอีเลคโทรลักซ์

ให้บริการข้อมูล รับแจ้งซ่อม แผนำวิธีการใช้สินค้า
พร้อมสรรพให้บริการ ที่
โทรศัพท์: 0-2725-9000 โทรสาร: 0-2725-9299
ทุกวัน ตั้งแต่ เวลา 6.00 – 22.00 น.
<http://www.electrolux.co.th>

